




**Insert the 2 pieces of
the legs together as
seen in the picture**

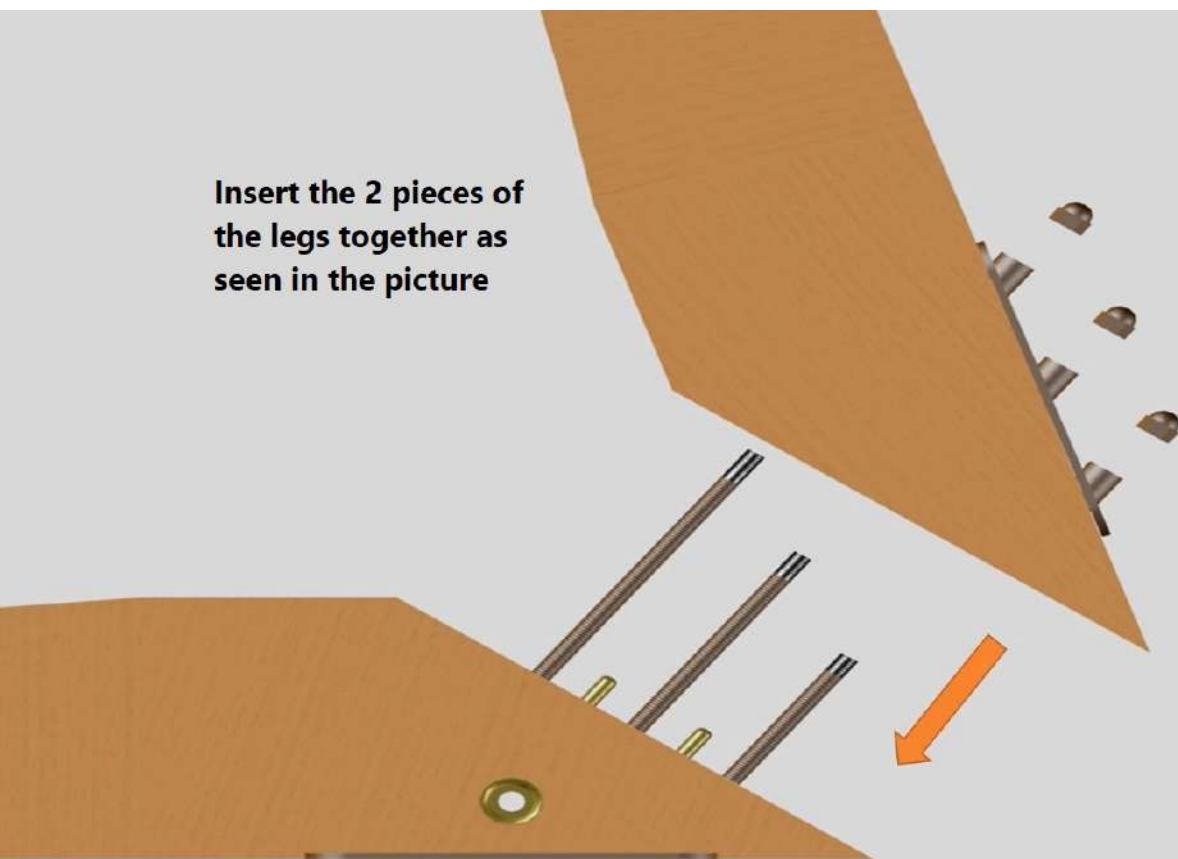


**Continue assembling
as shown in the picture**

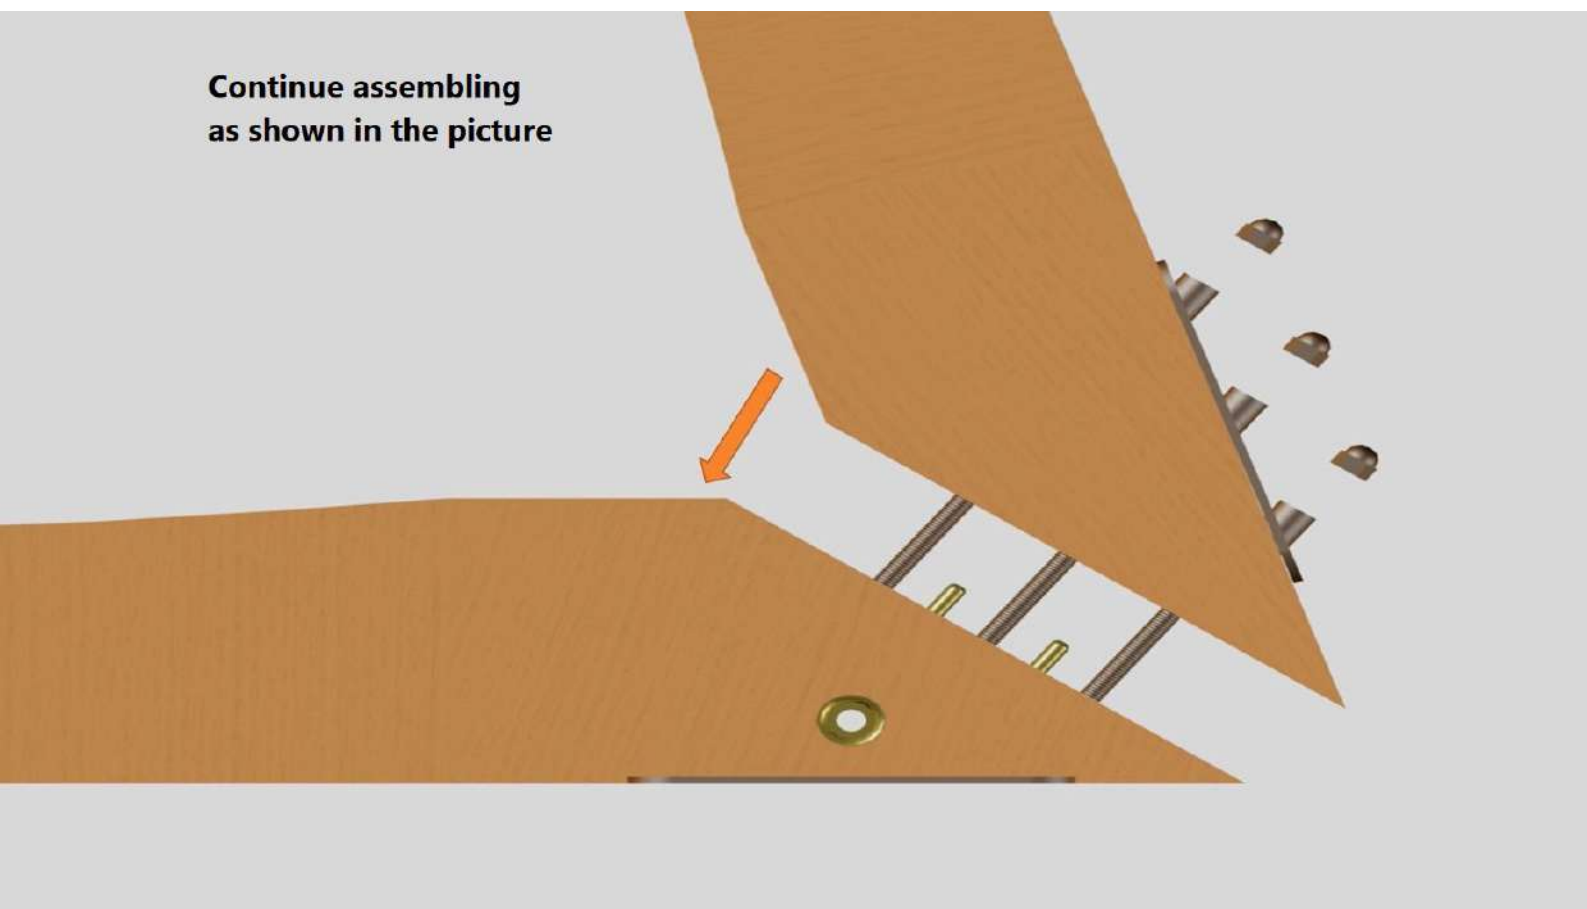

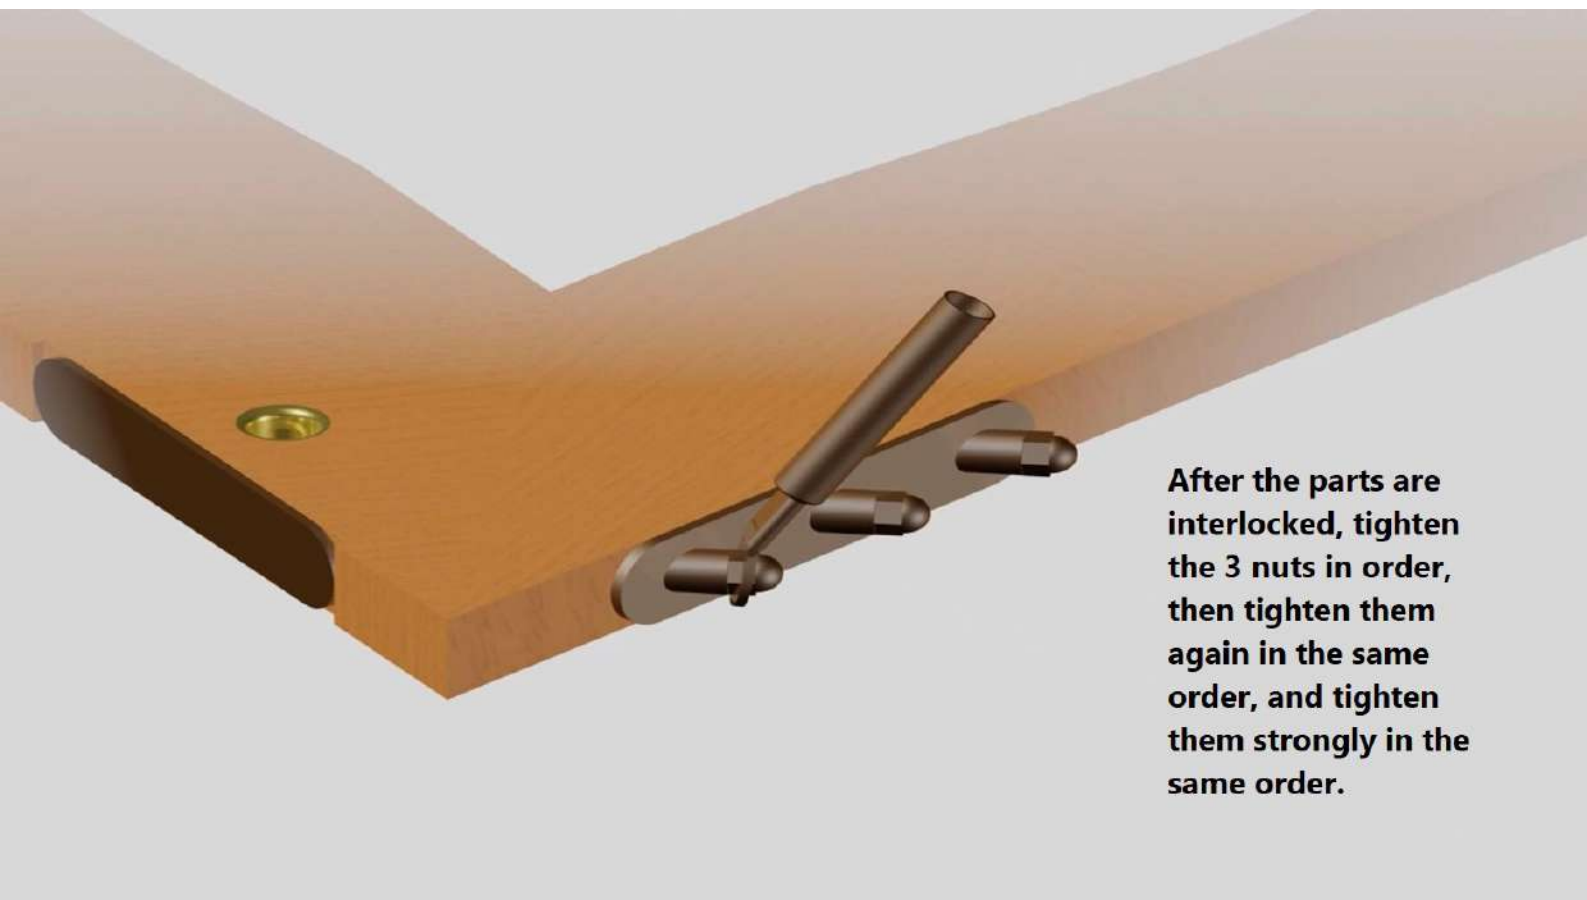


After the parts are interlocked, tighten the 3 nuts in order, then tighten them again in the same order, and tighten them strongly in the same order.

**At the end it will look
like in the picture.**

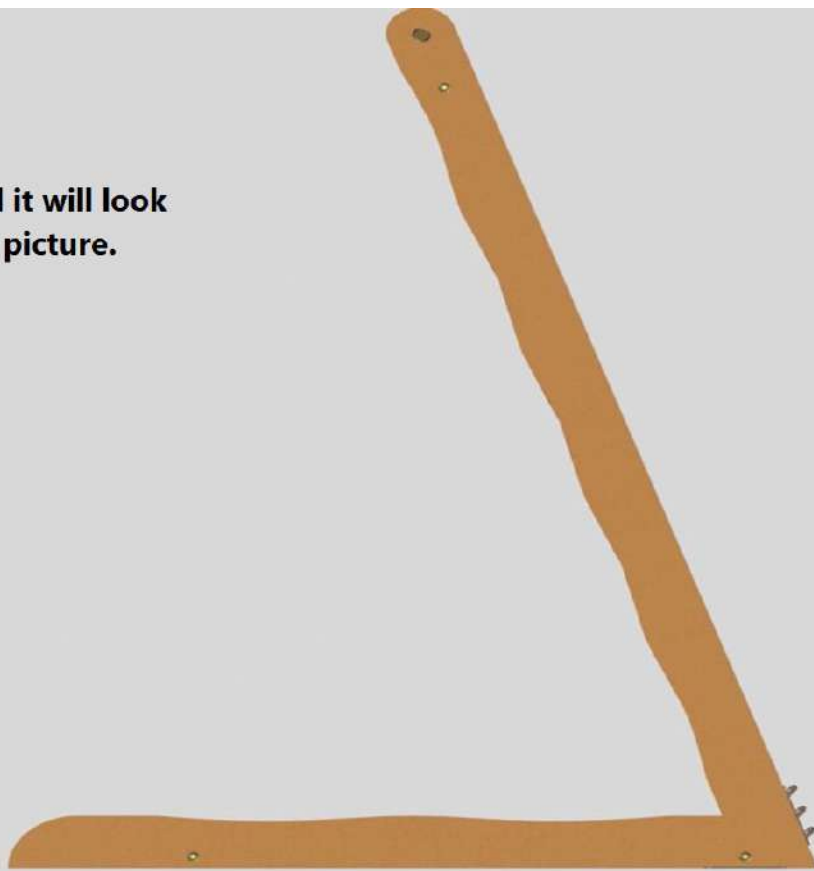





The diagram shows a 3D perspective view of a swing frame. It consists of two wooden side rails and three horizontal metal bars. The top bar is the highest, the middle bar is in the center, and the bottom bar is the lowest. Orange arrows are placed at the ends of each bar, pointing towards the center to indicate the direction of tightening. The text 'Tighten the middle bars of the swing in the direction of the arrows in the picture.' is centered in the middle of the frame.


Tighten the middle bars of the swing in the direction of the arrows in the picture.


**At the end it will
appear as in the
picture.**

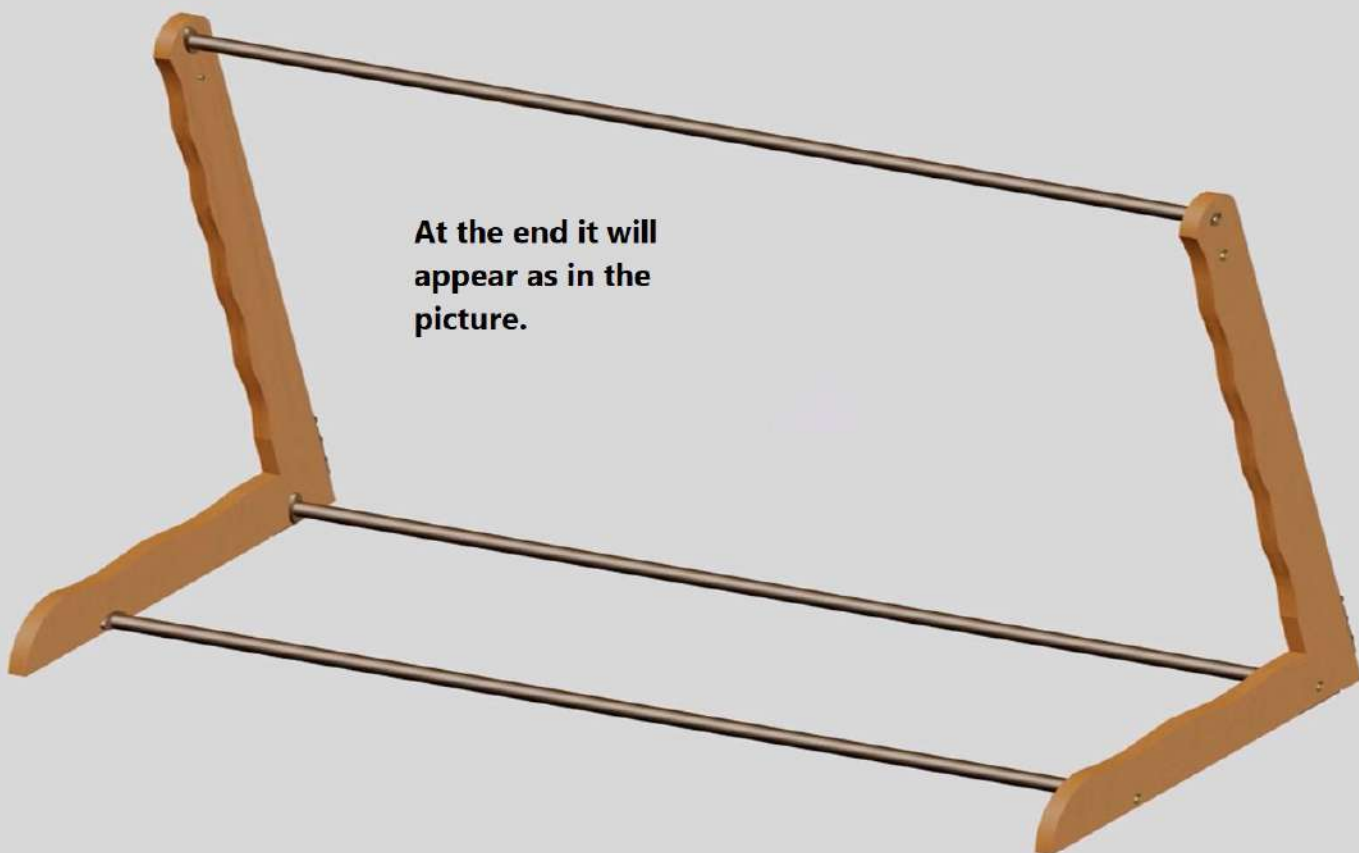

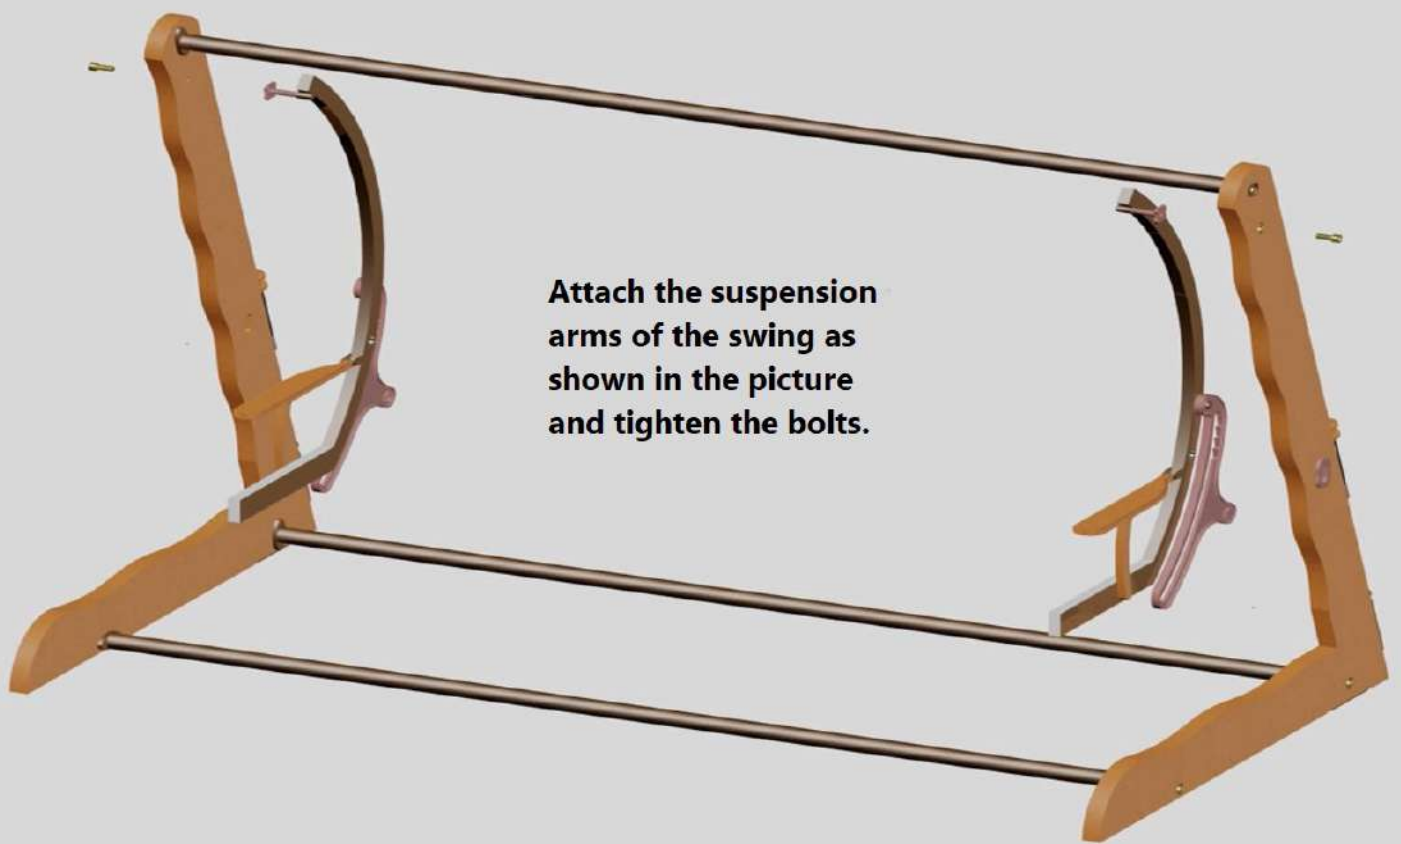


**At the end it will look
like in the picture.**

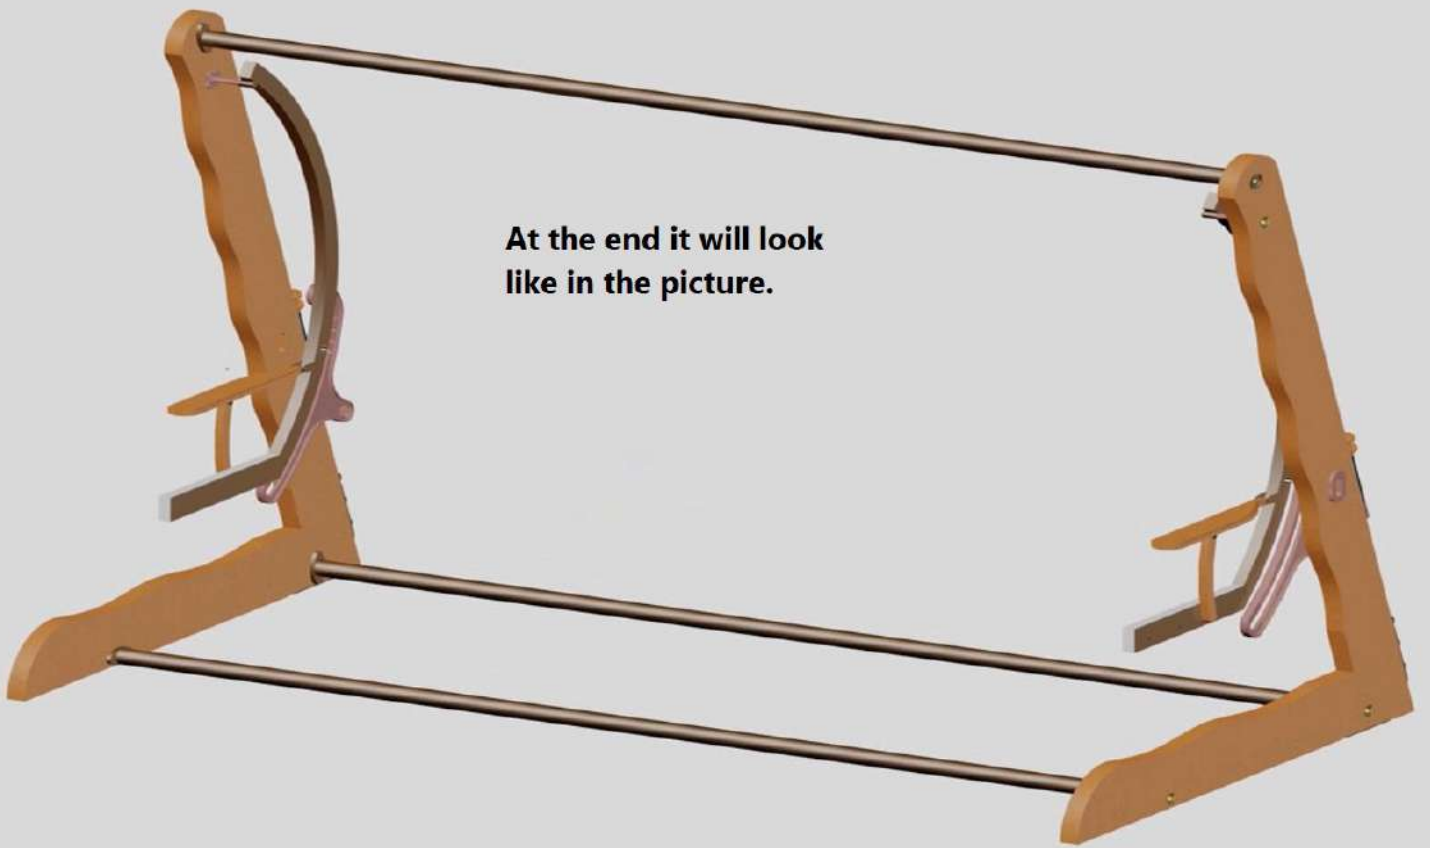


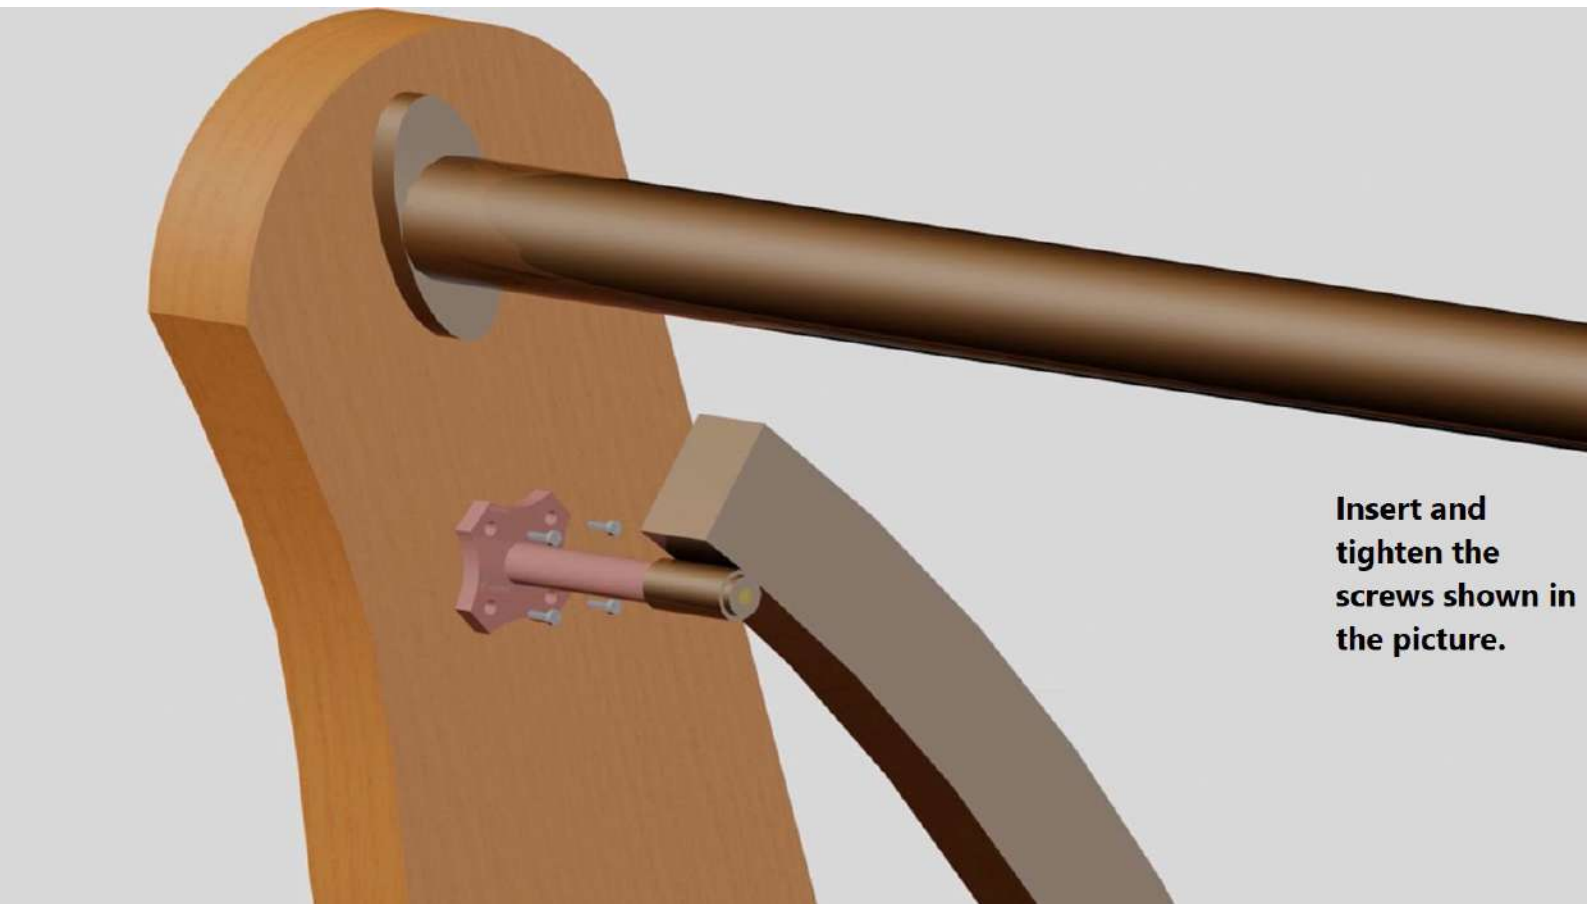


**Insert and
tighten the
screws shown in
the picture.**

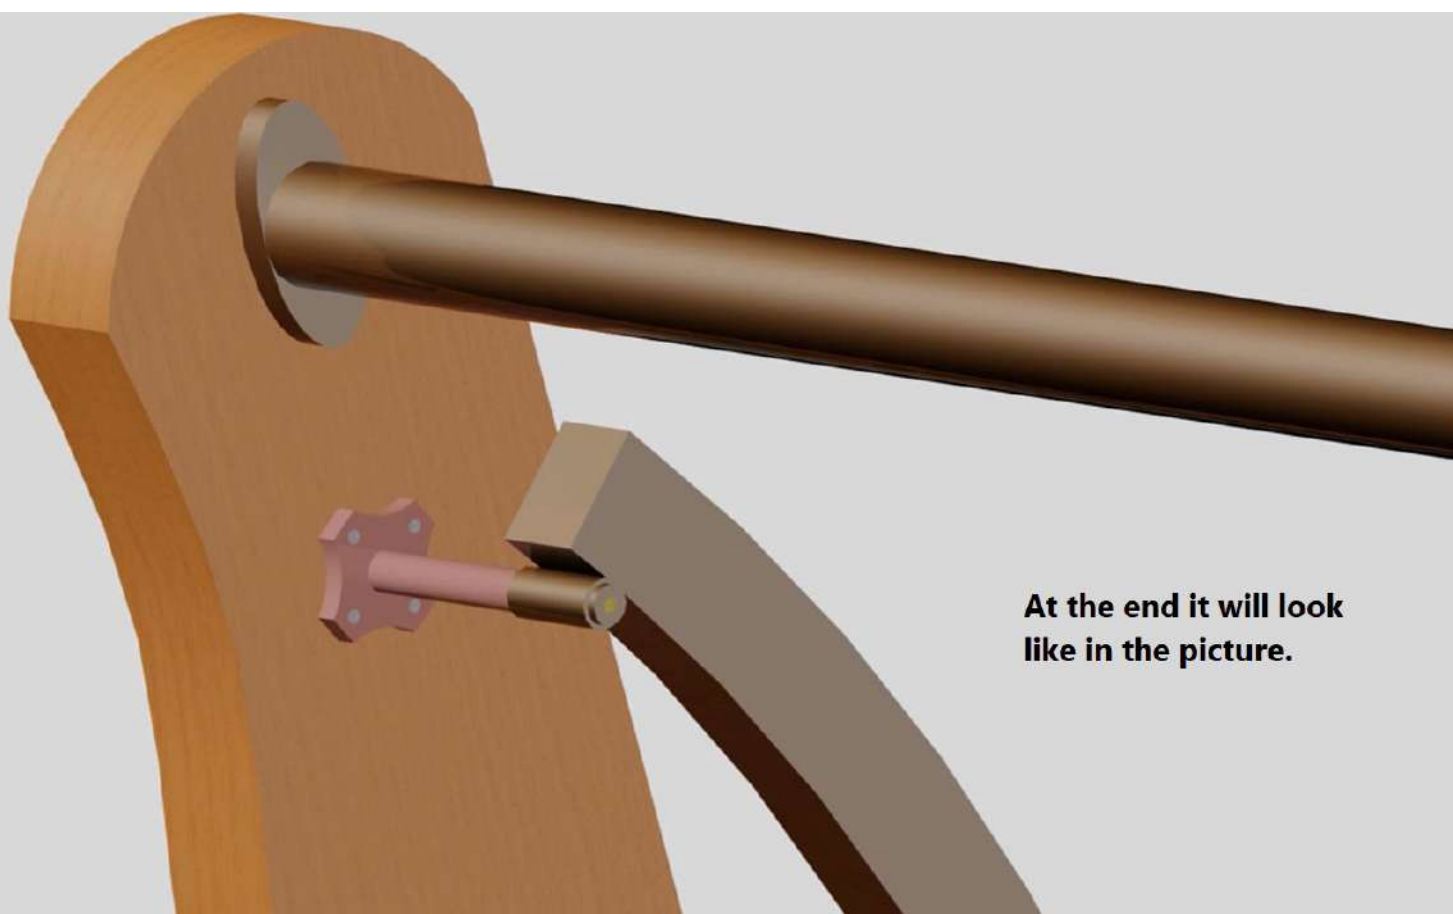

**At the end it will look
like in the picture.**

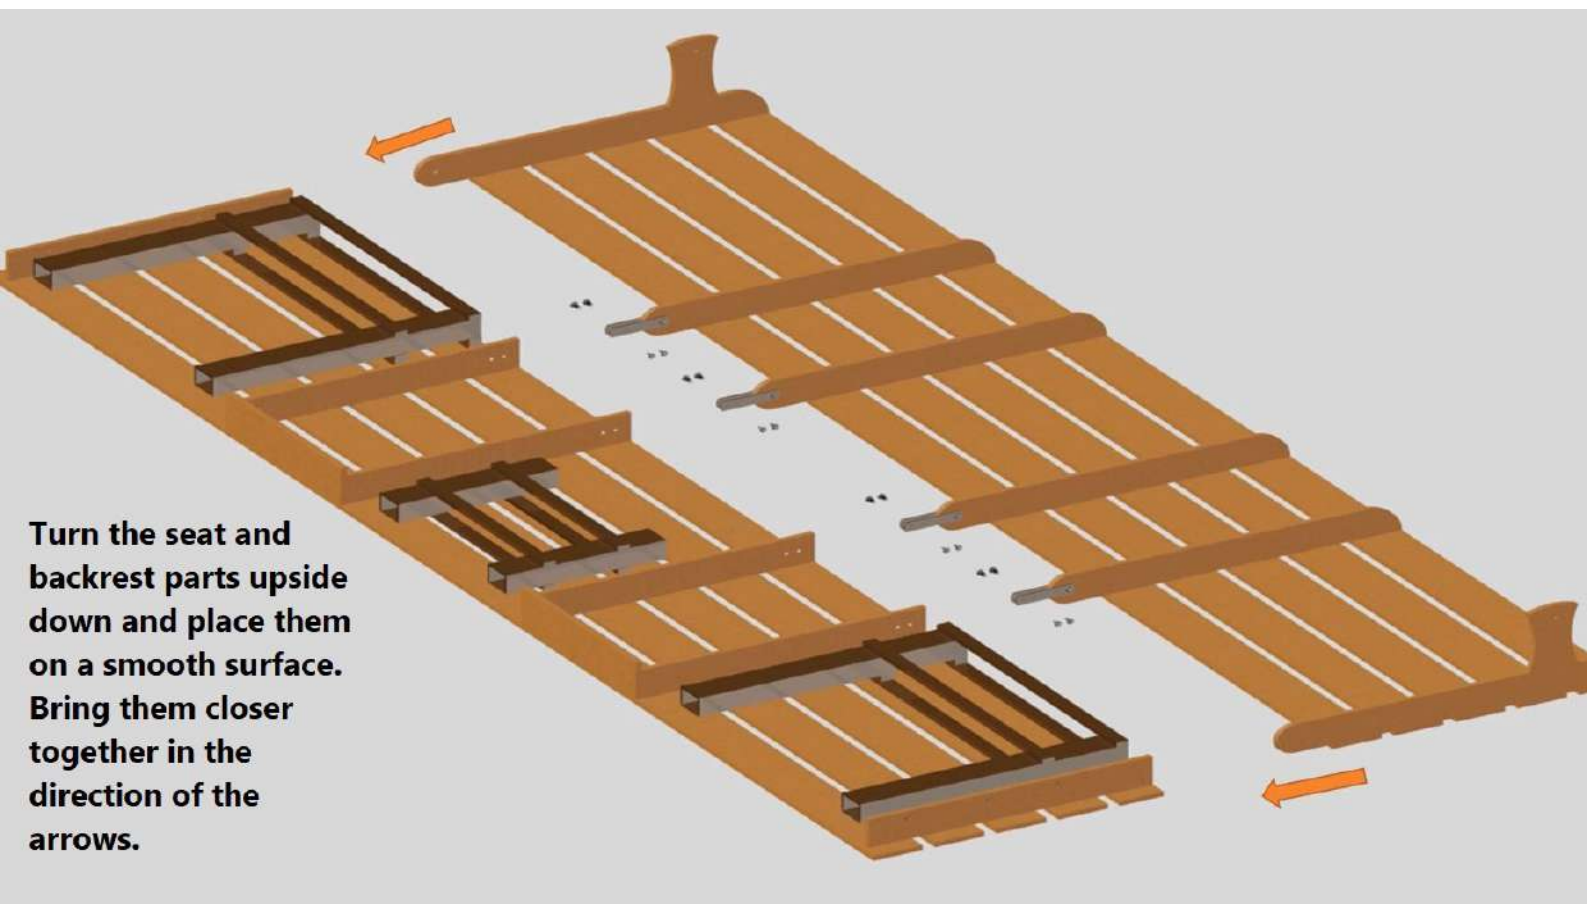


Turn the seat and backrest parts upside down and place them on a smooth surface. Bring them closer together in the direction of the arrows.

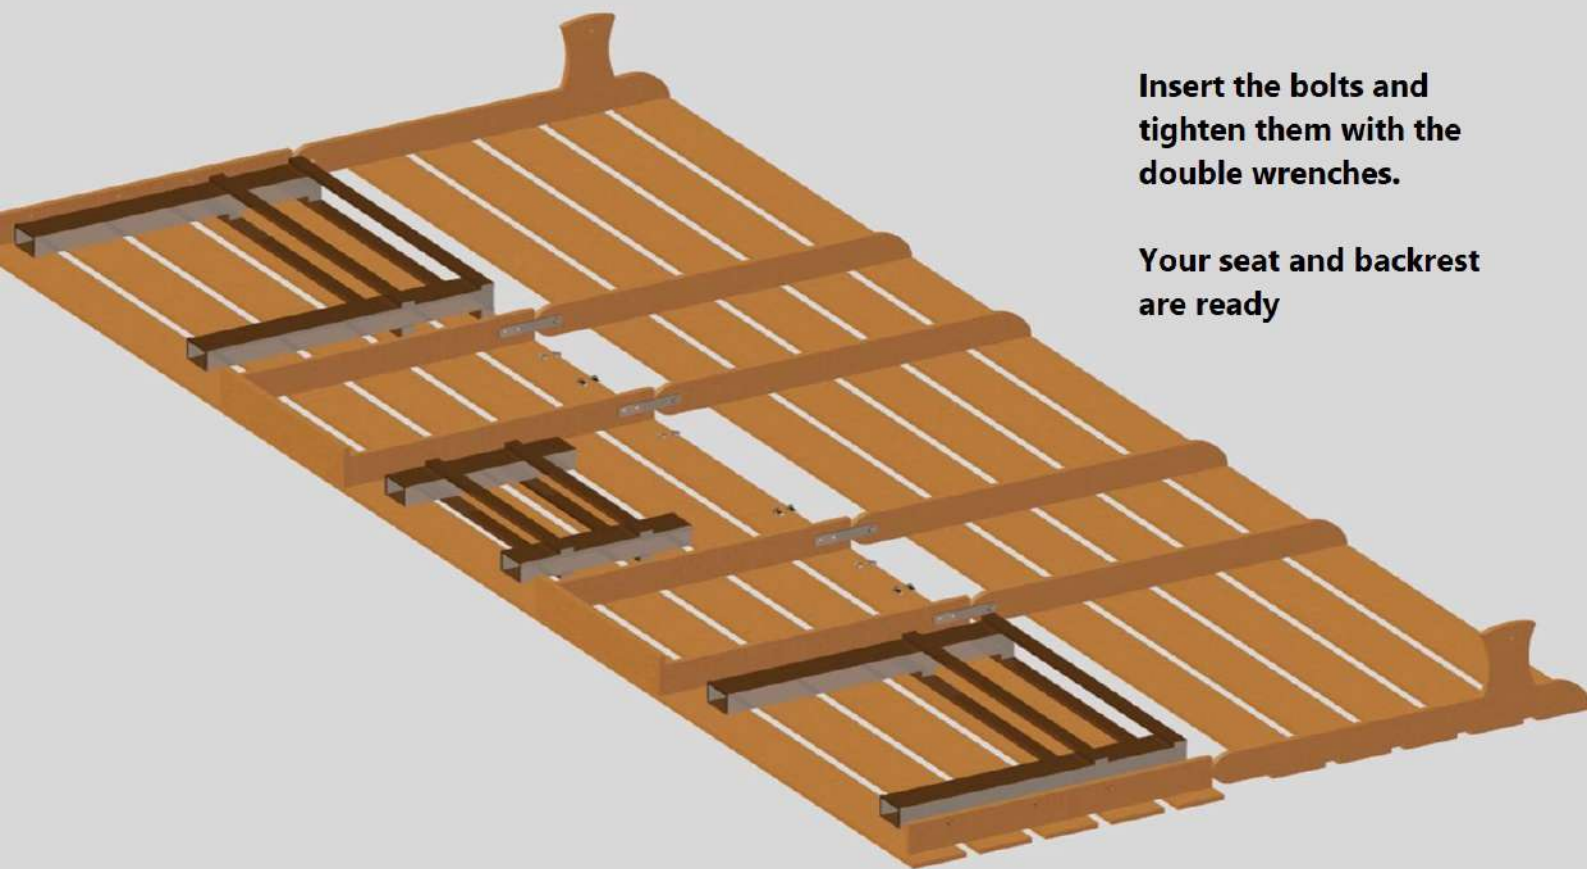

**Insert the bolts and
tighten them with the
double wrenches.**


**Your seat and backrest
are ready**

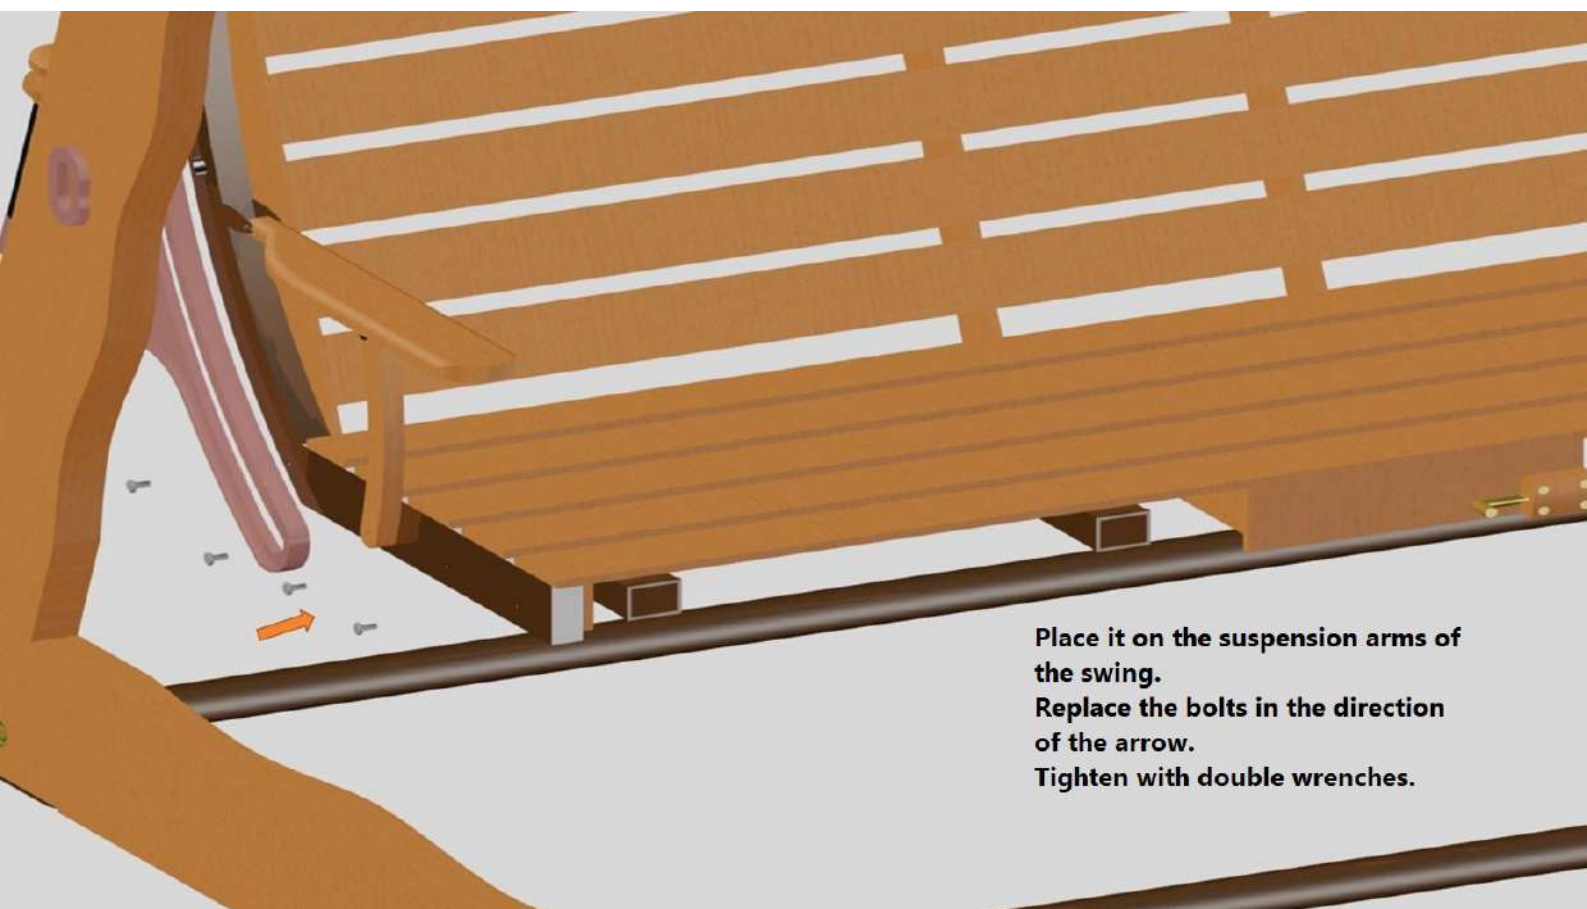


**Place it on the suspension arms of
the swing.
Replace the bolts in the direction
of the arrow.
Tighten with double wrenches.**



**Keep the Backrest of
the Swing in the bed
position.**

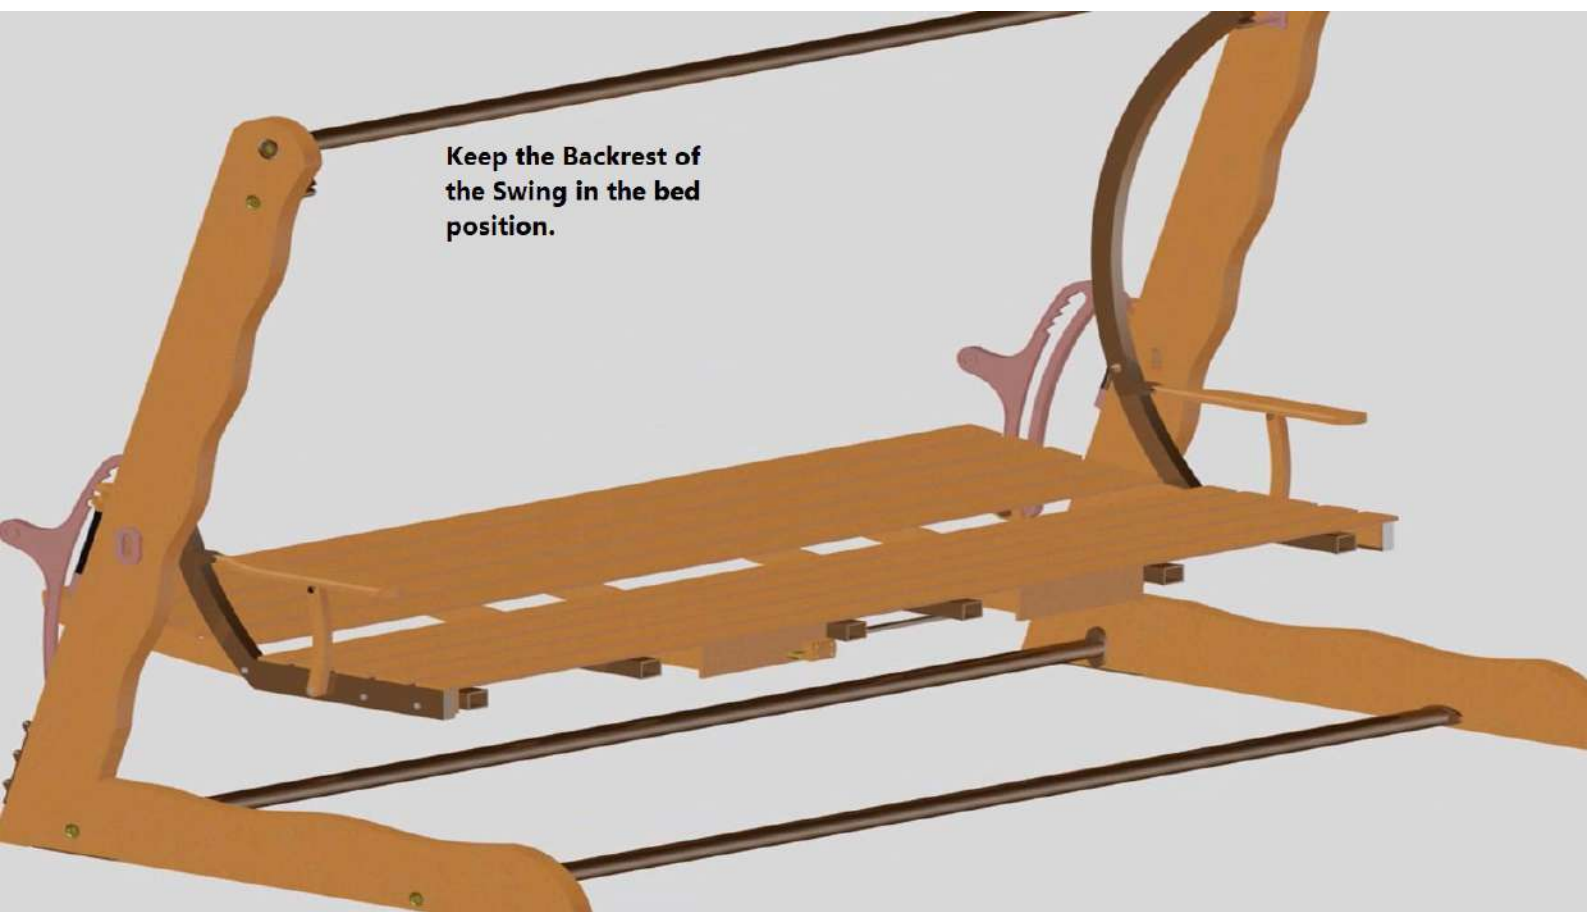

Pull the adjusting pin into the bed-making step section as seen in the diagram and from the angle.

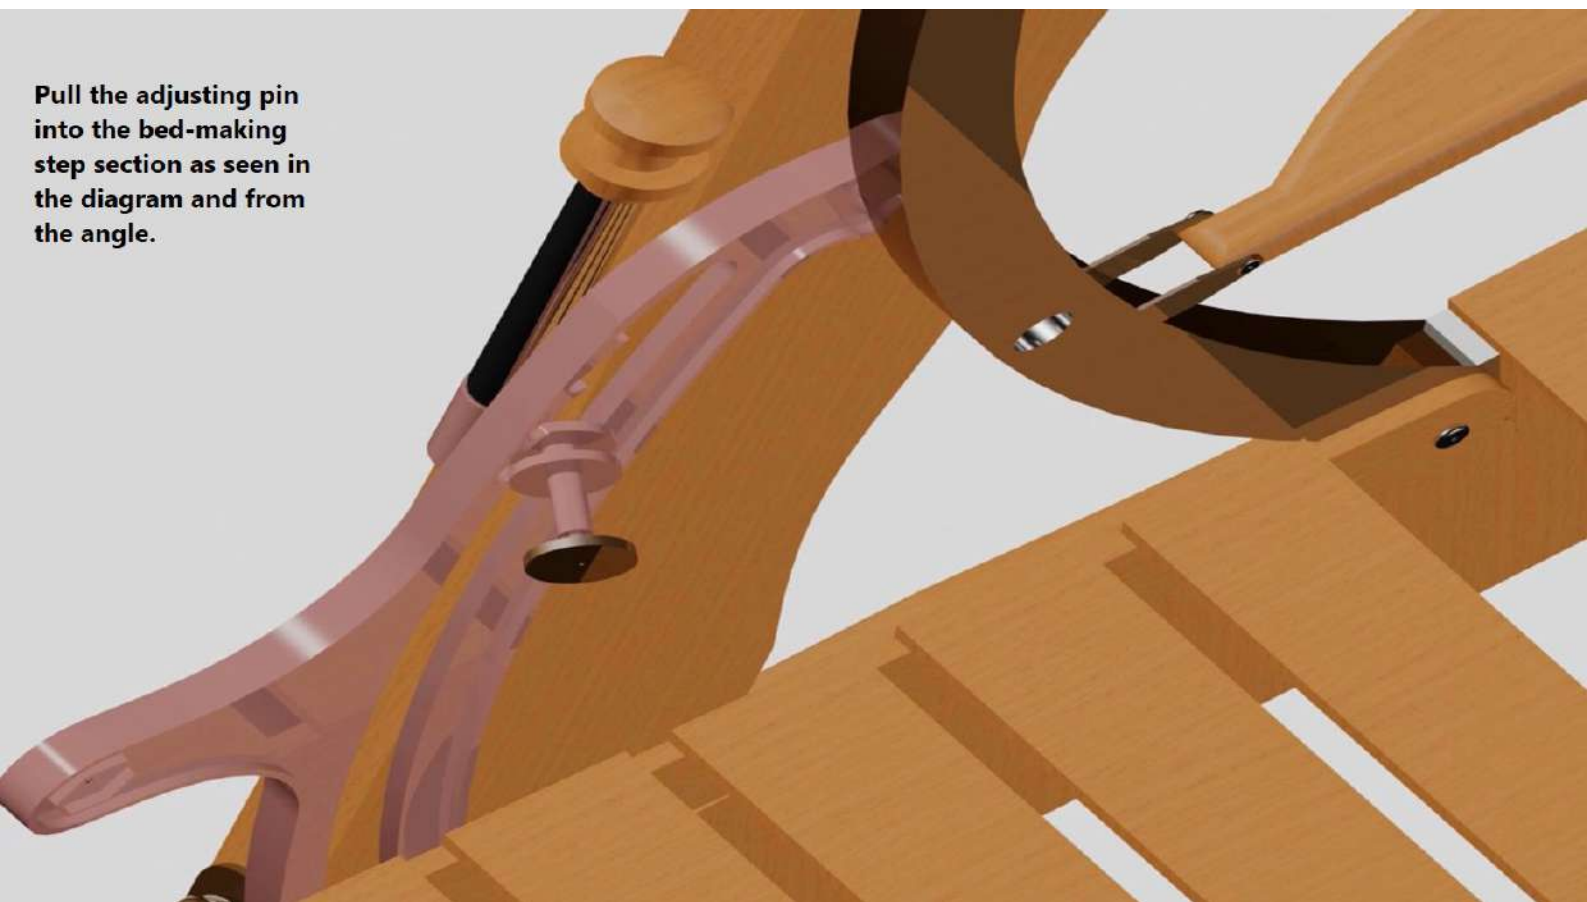


**History of the
adjusting pin.**




**Remove the washer
and bolt on the
adjusting pin.**



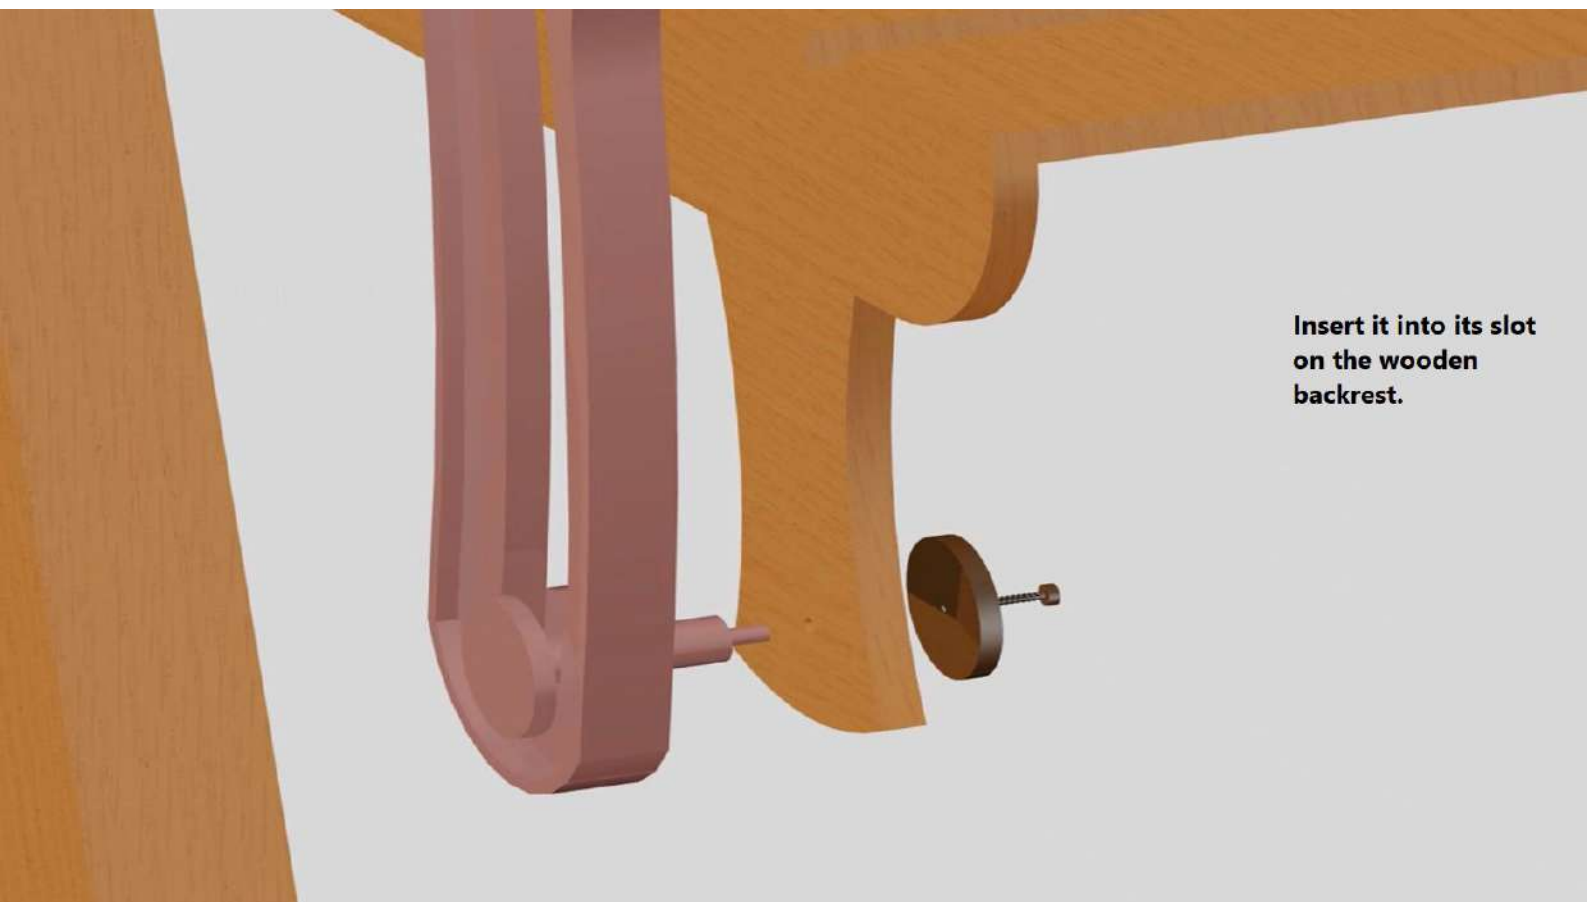


**Insert it into its slot
on the wooden
backrest.**

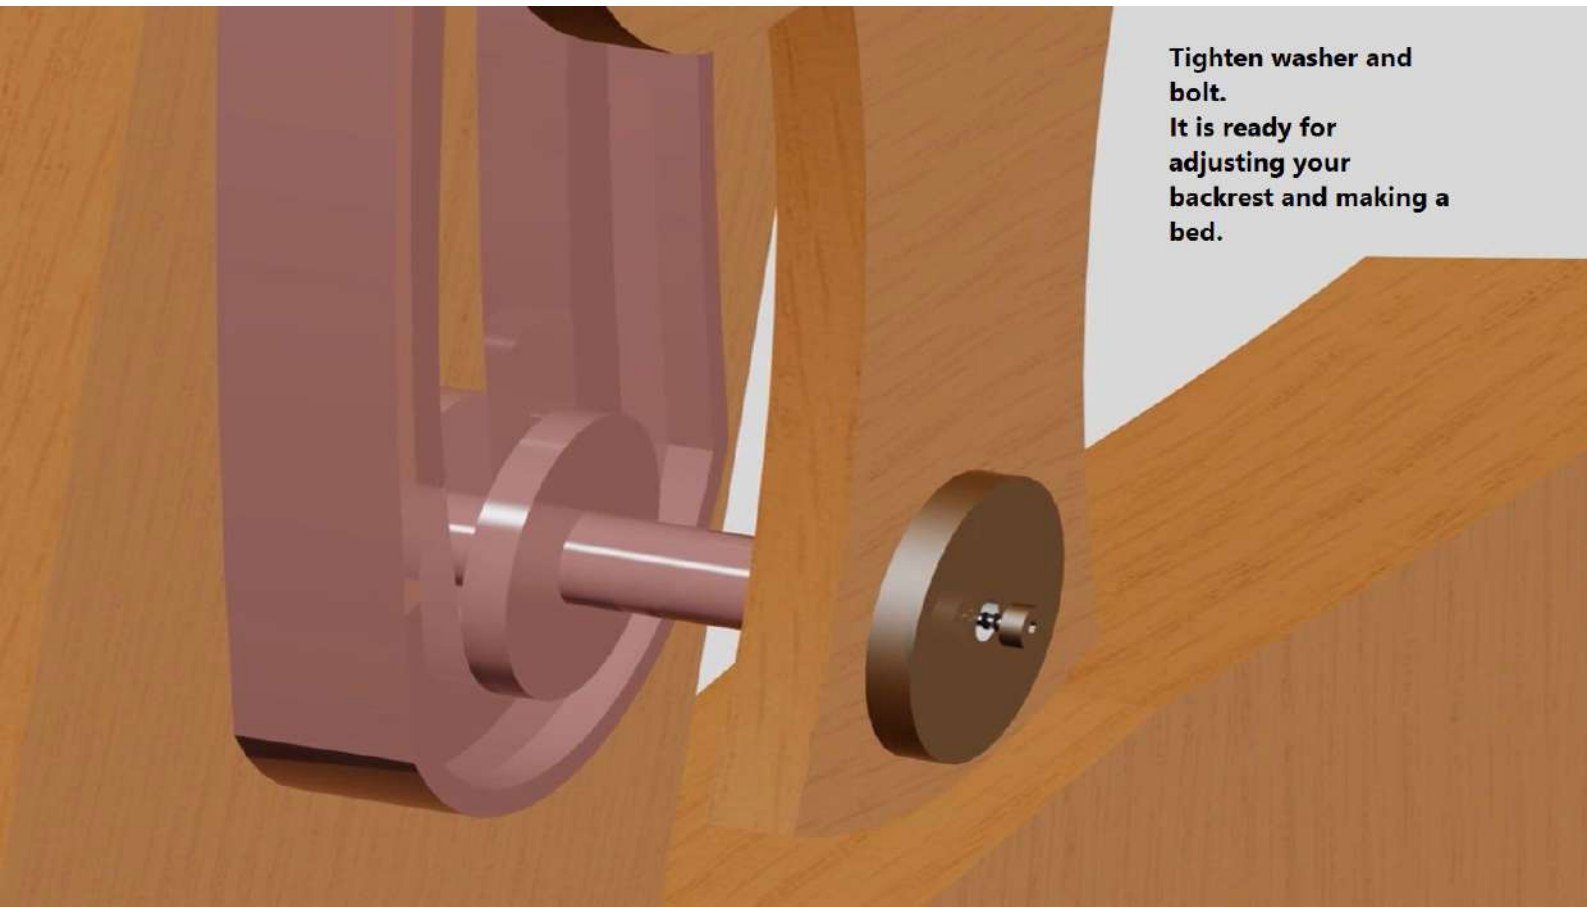



**Tighten washer and bolt.
It is ready for
adjusting your
backrest and making a
bed.**

**Bring the backrest of
the swing to the
sitting position.**

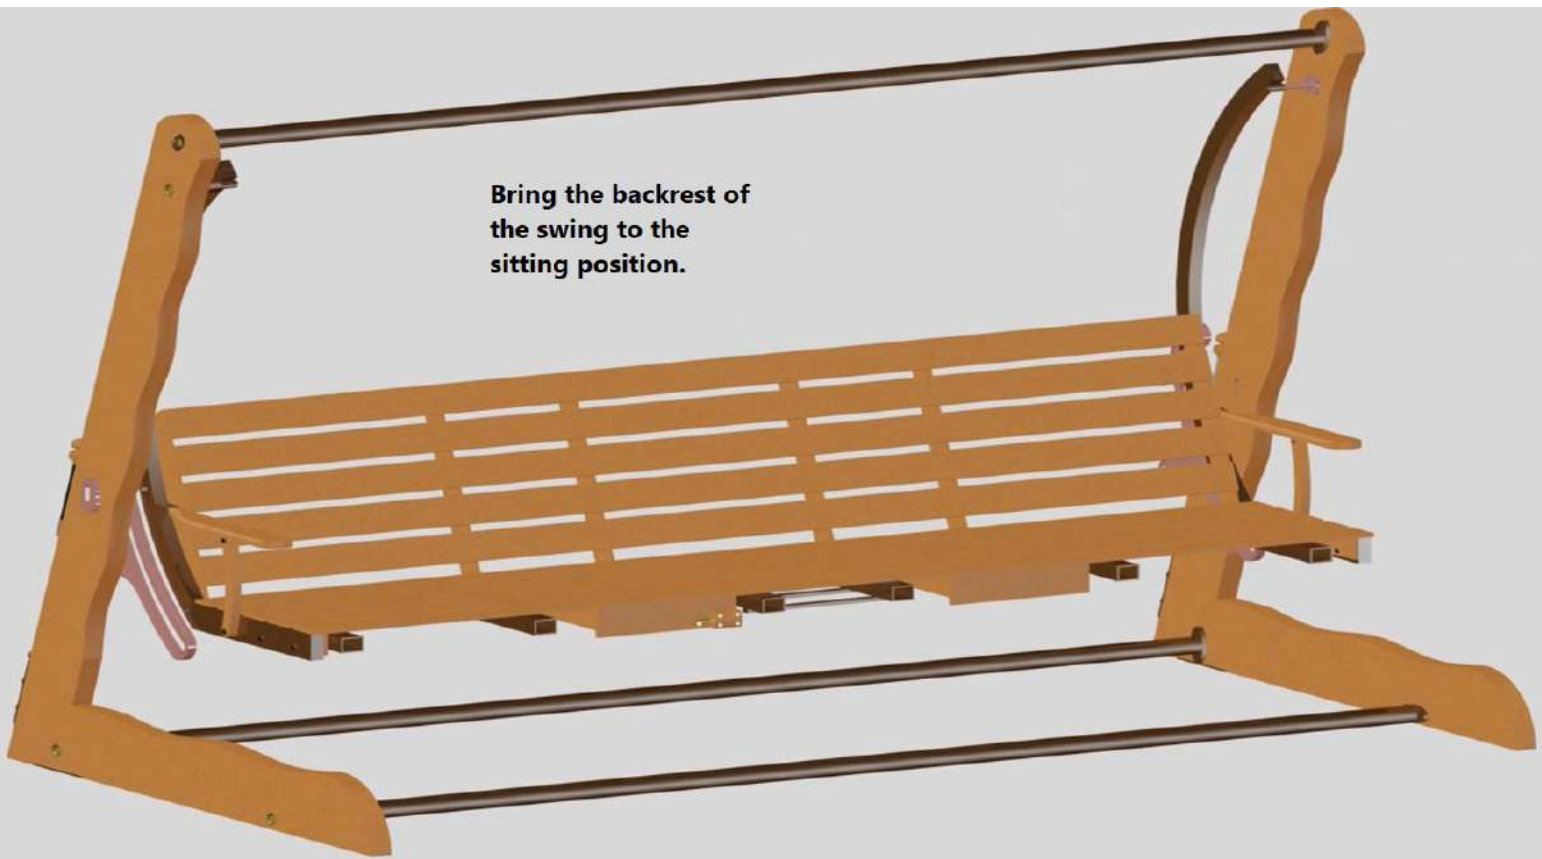

Insert the tap
adjustment pipe into
its socket as shown in
the picture.

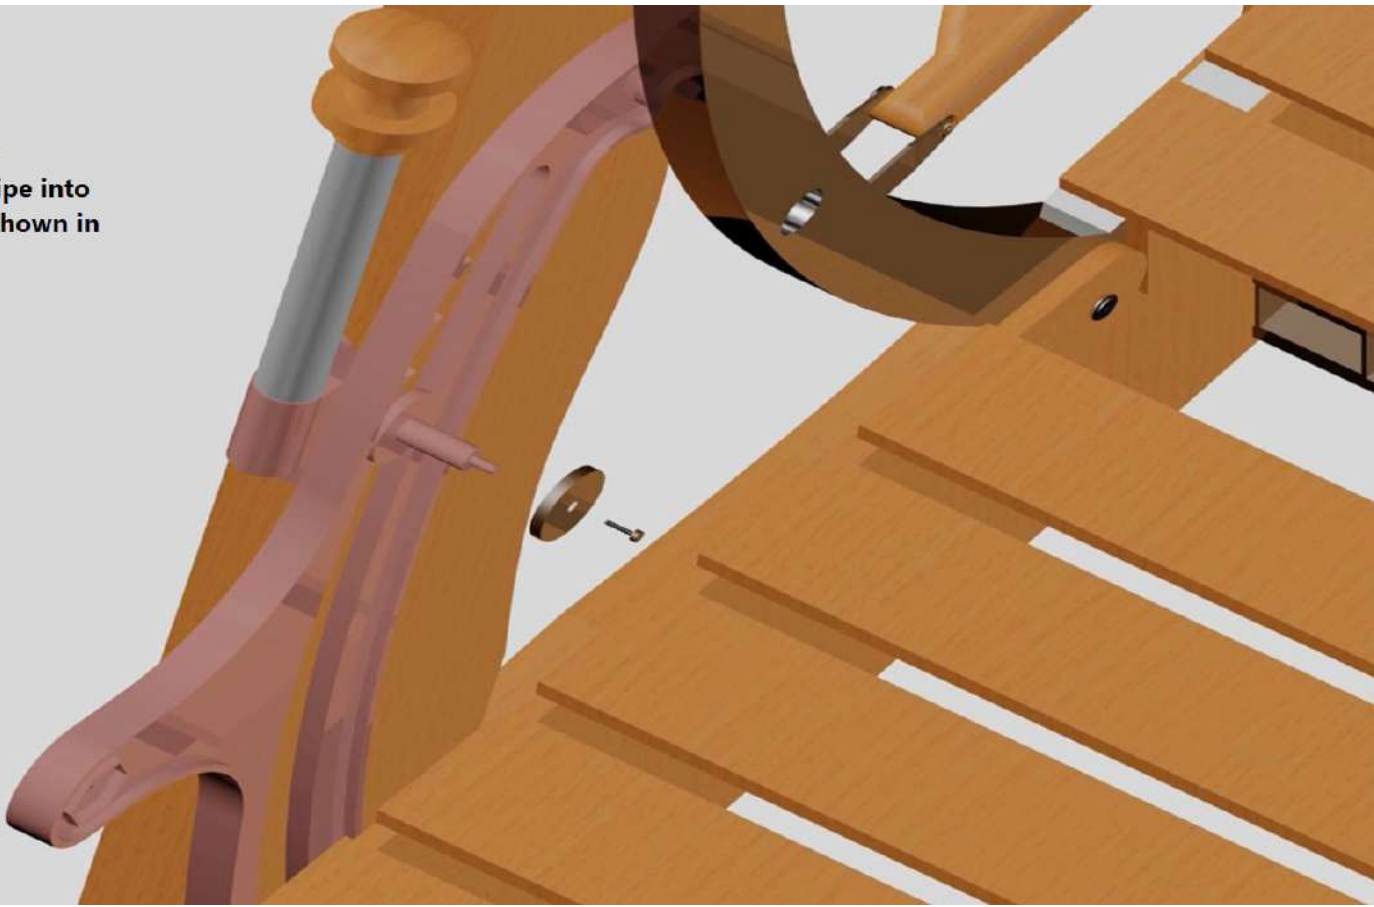


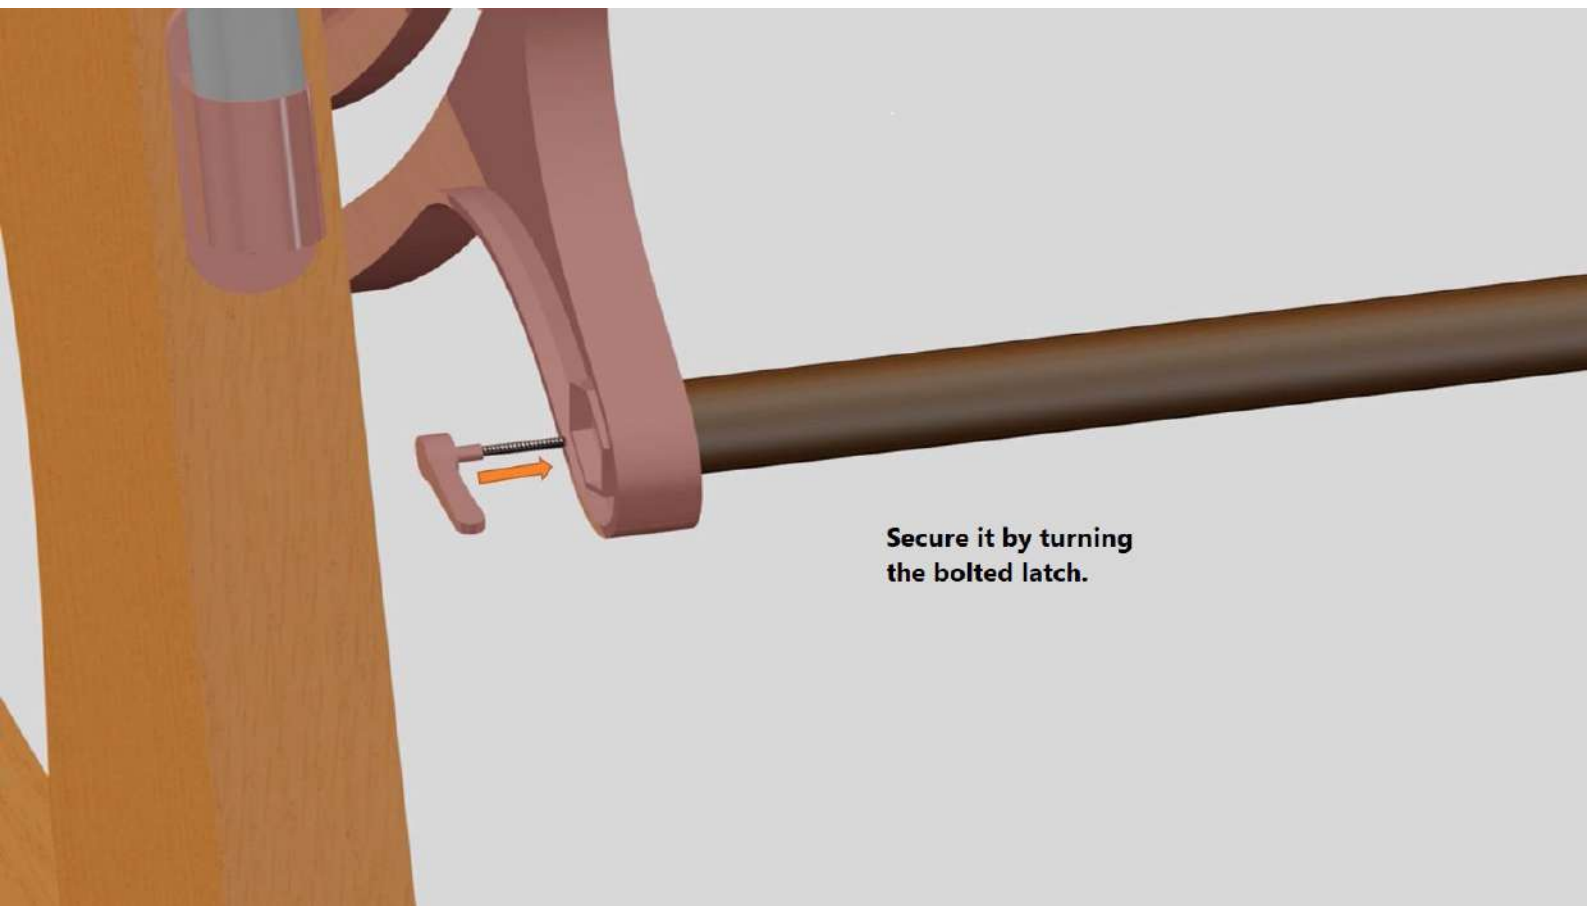

**Secure it by turning
the bolted latch.**



**You can fix
your swing by
inserting the
fixing pin
through its slot
and into its
slot on the
suspension
arm.**

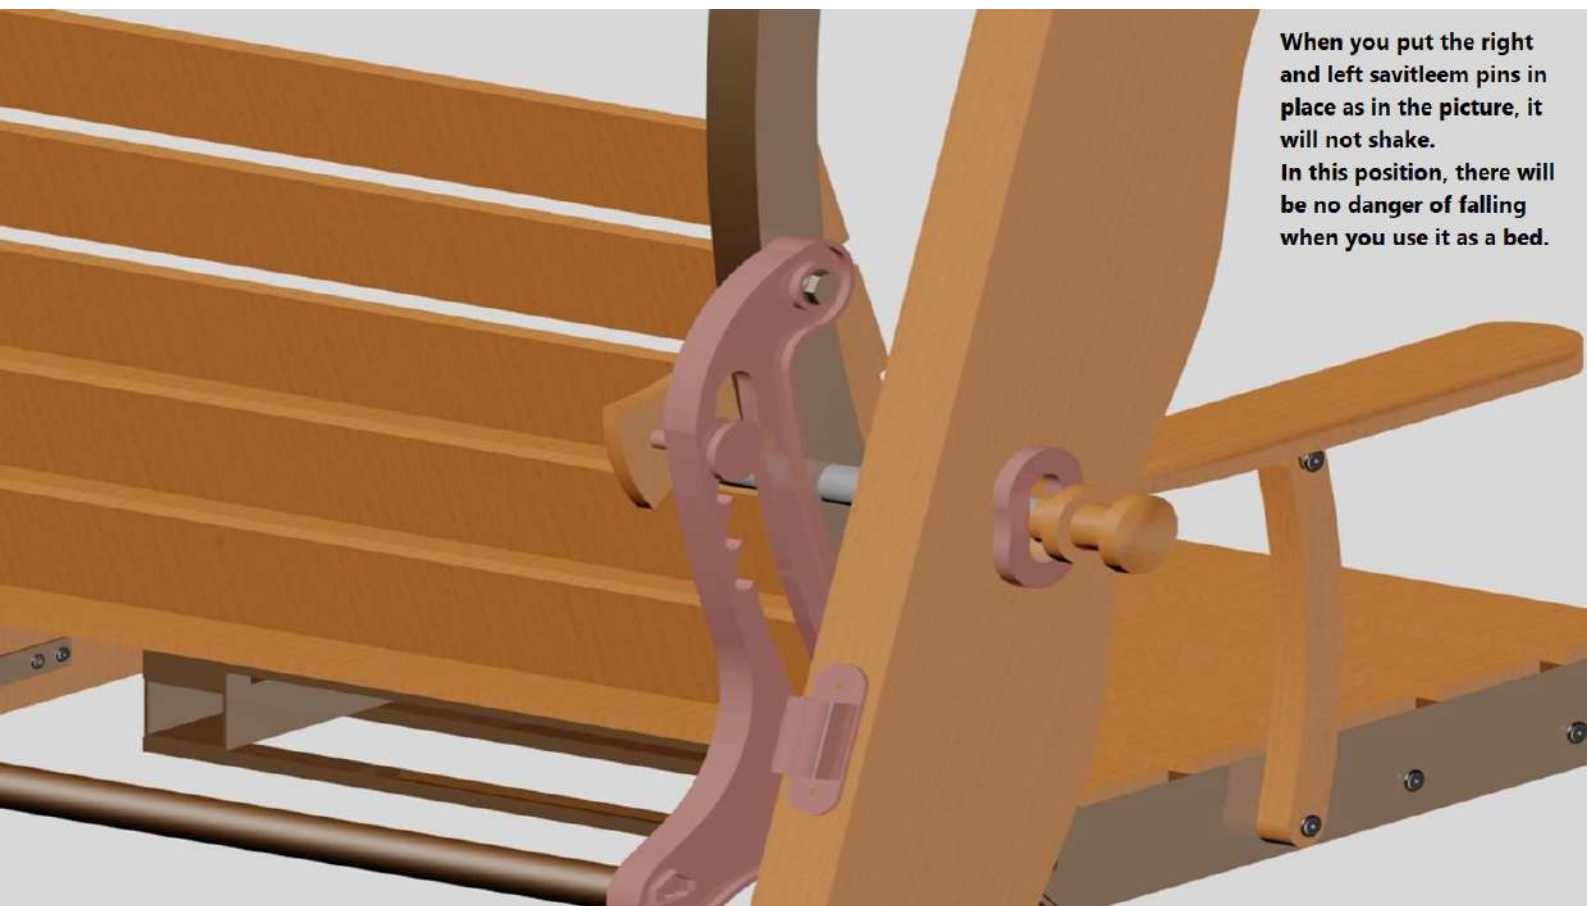



When you put the right and left savitleem pins in place as in the picture, it will not shake.
In this position, there will be no danger of falling when you use it as a bed.

Insert the foot
extensions into your
slots.





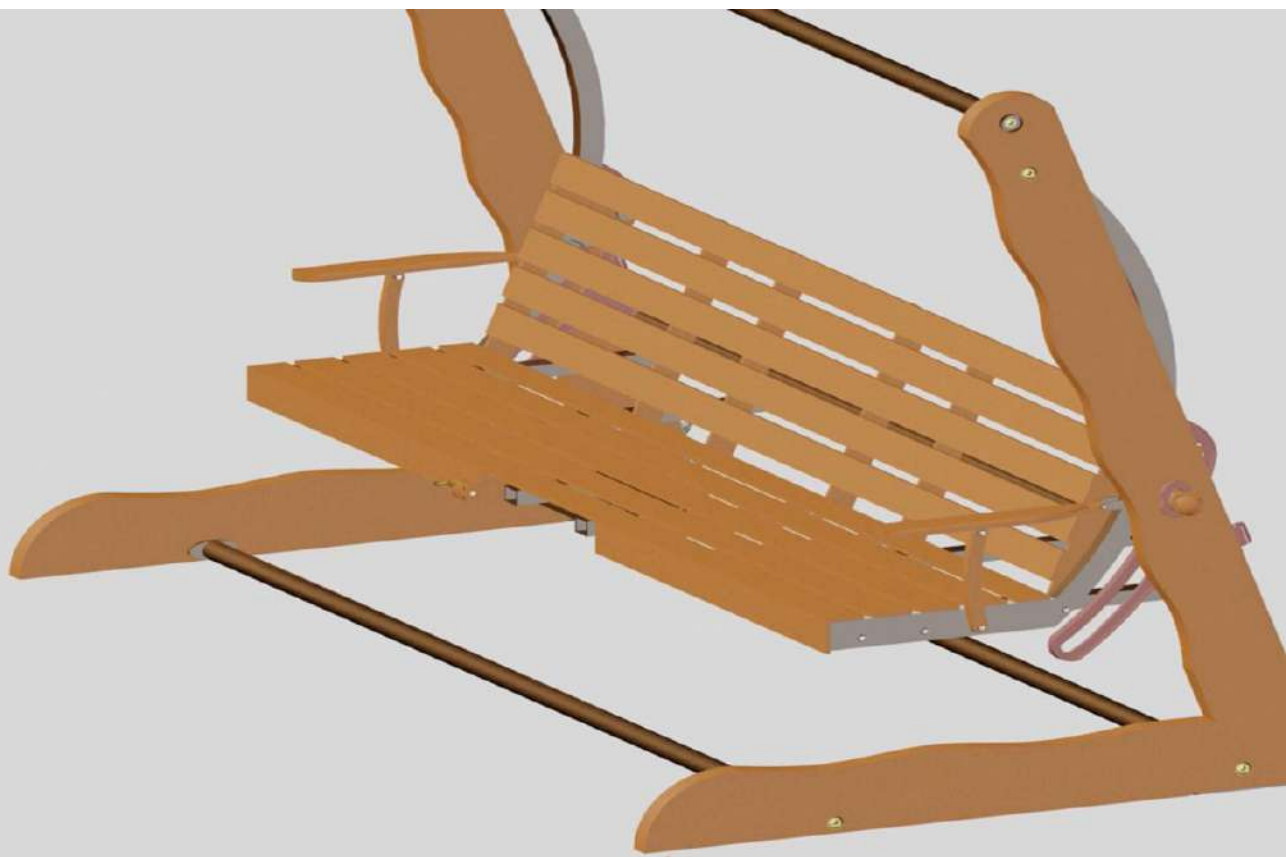


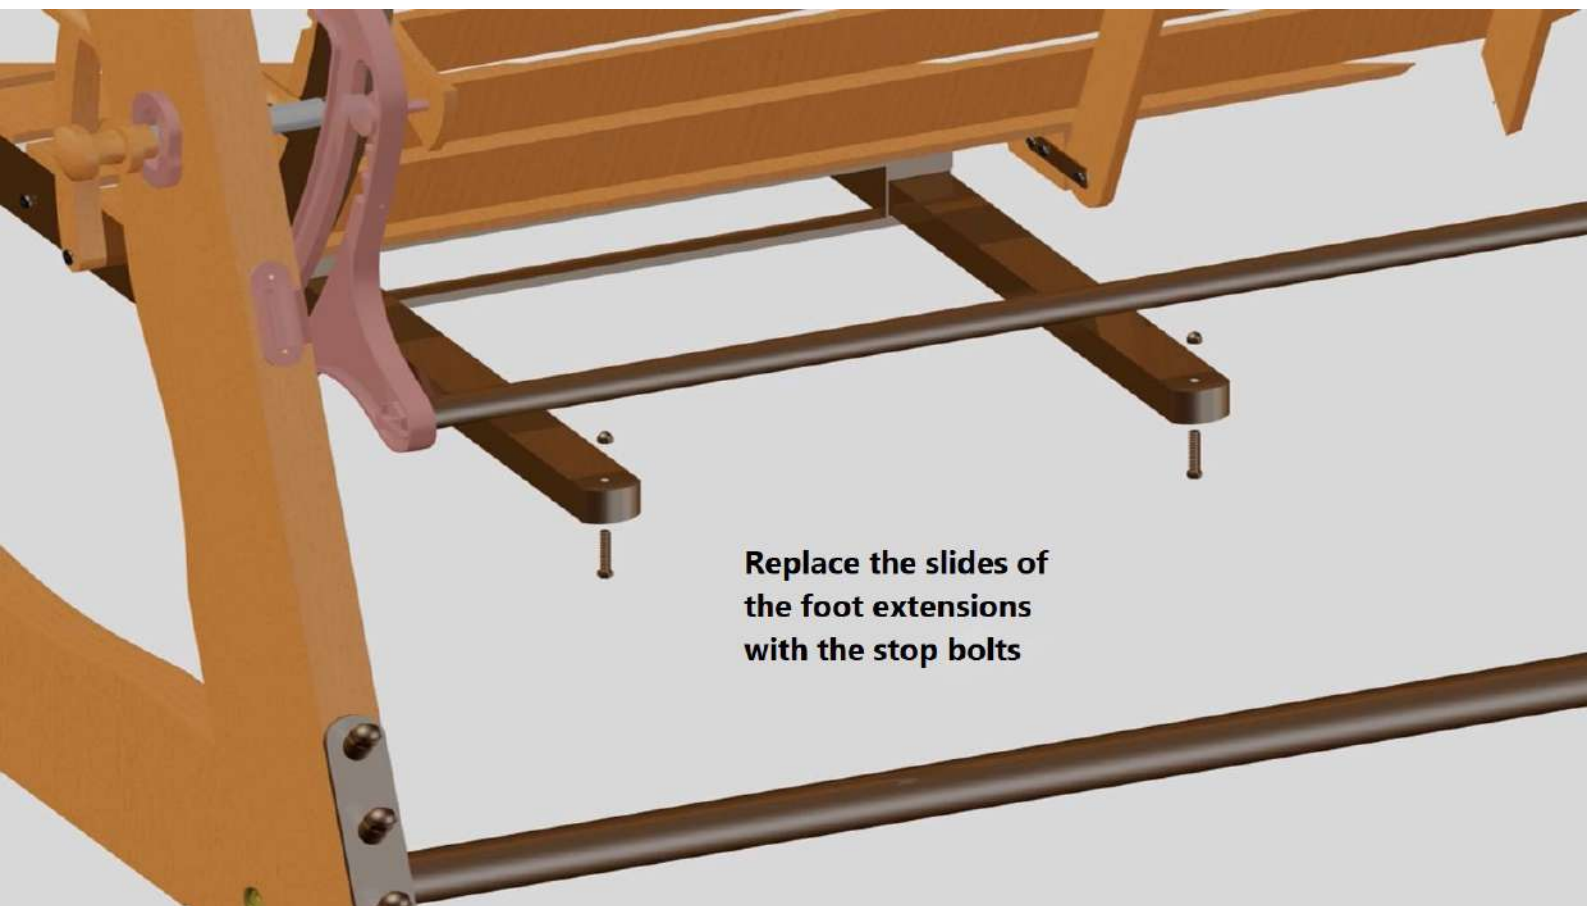



**Replace the slides of
the foot extensions
with the stop bolts**




**Insert the runners of
the bar into your slots.**

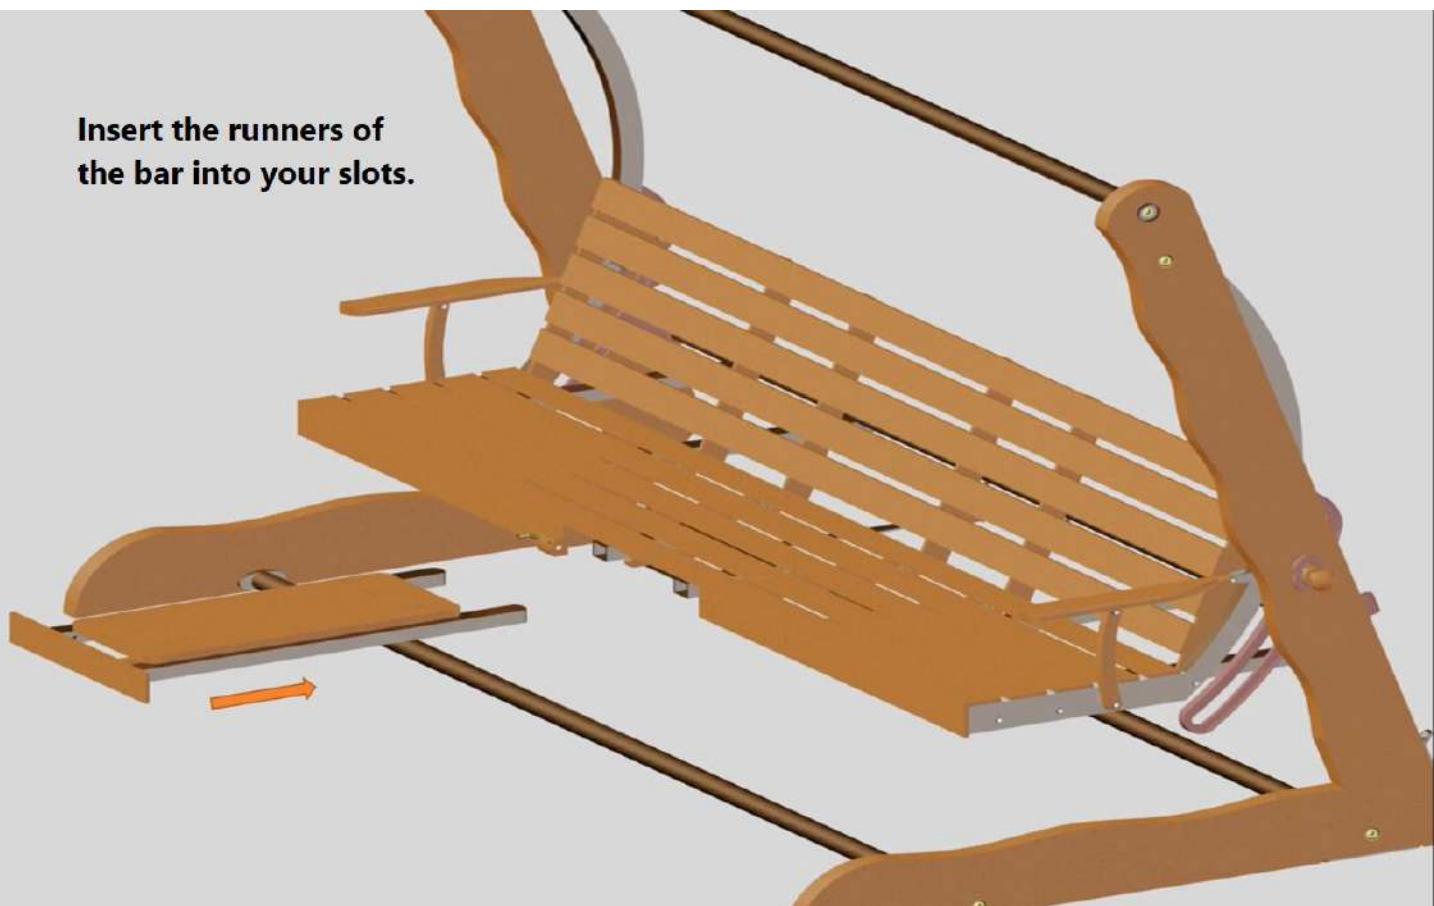

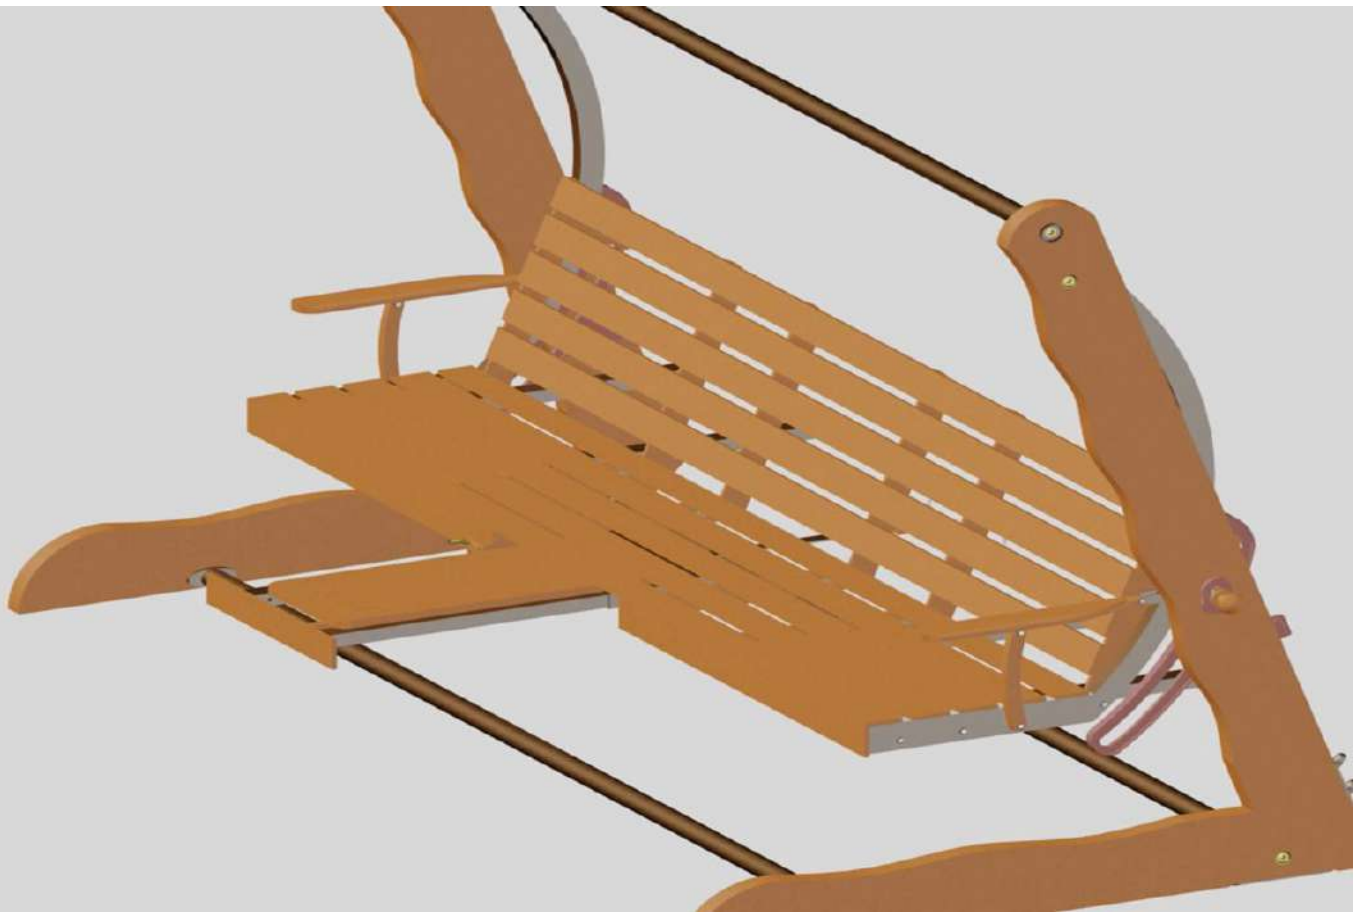

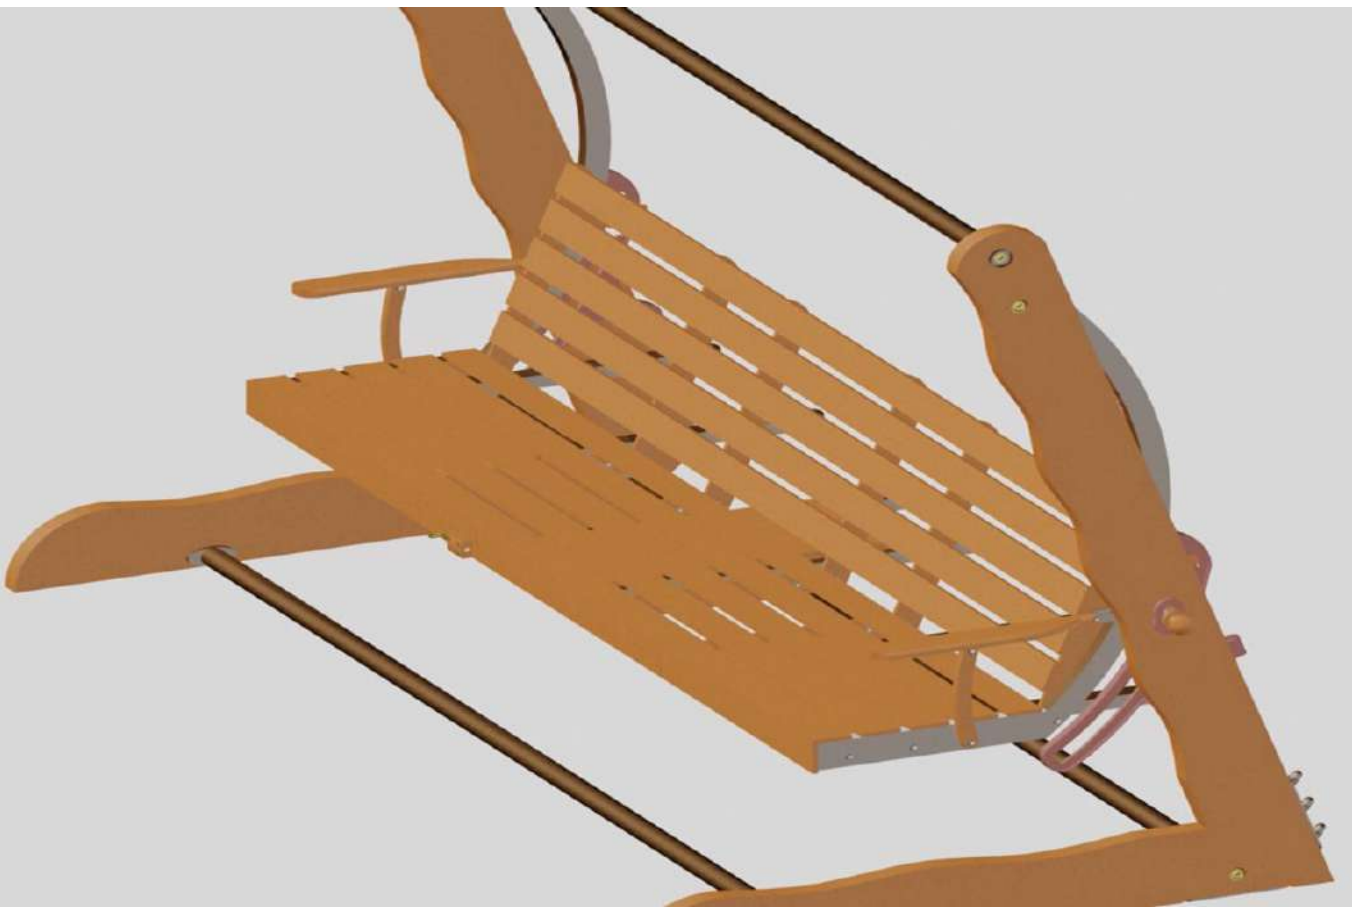

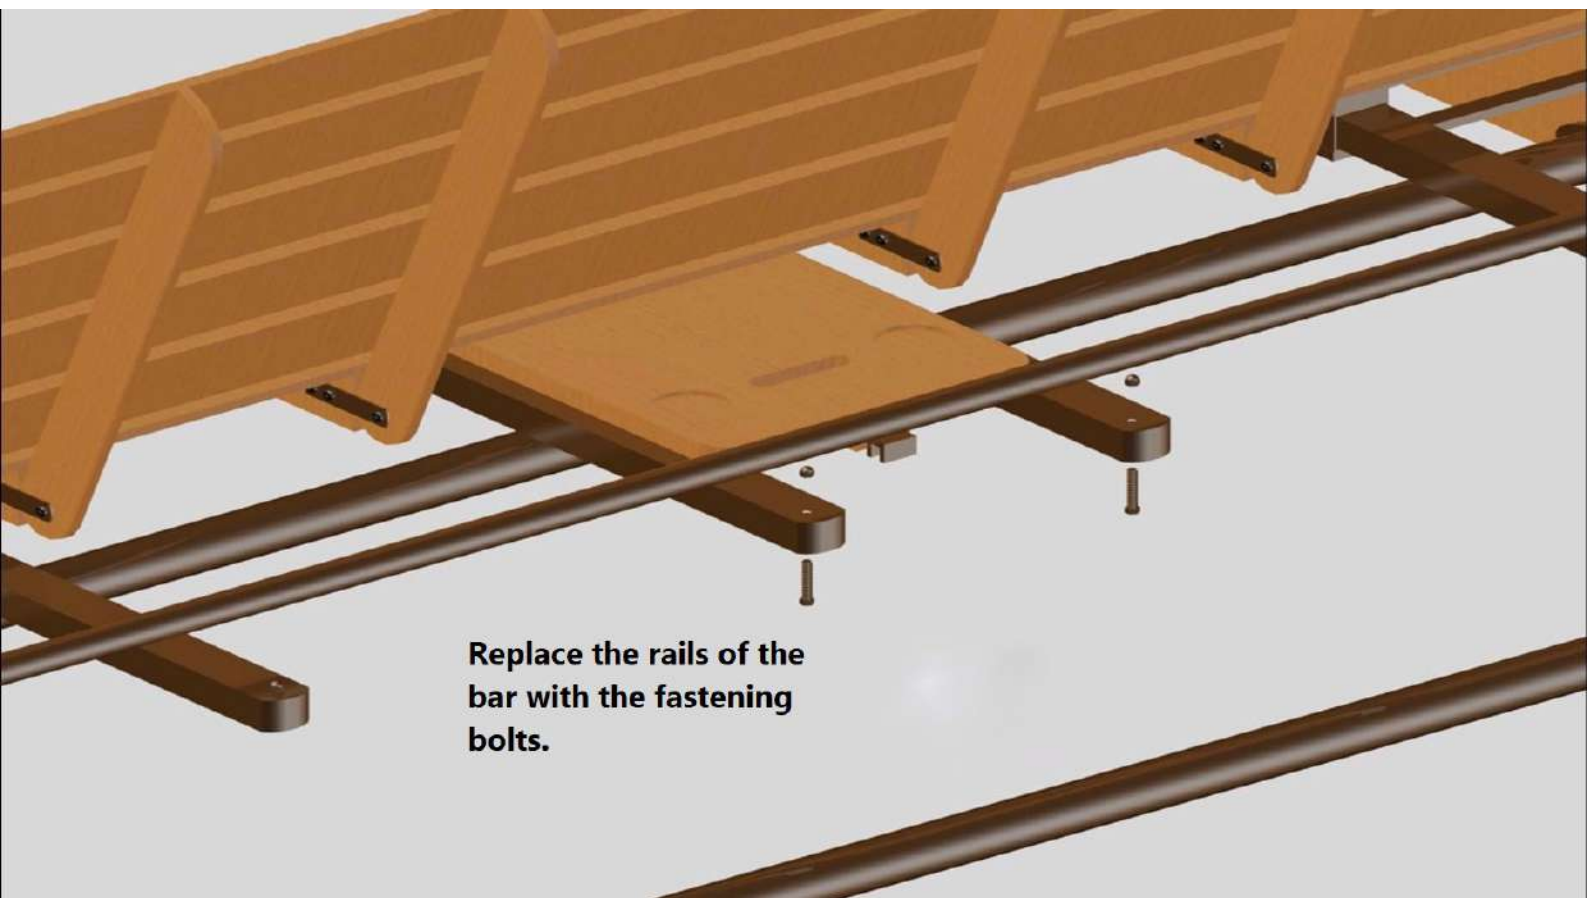

**Replace the rails of the
bar with the fastening
bolts.**

