

PLACE THE UPPER HORIZONTAL FIXTURE OF THE FRONT SIDE AT A PITCH ANGLE THAT IS AESTHETIC FOR YOU.

SURFACE WITH THE LOGO FACING YOU.

WHEN ASSEMBLING THE SWING FIX THE FRONT LEG HORIZONTAL FIXTURE **HORIZANTALLY**.

THE WIDE SURFACE FACING THE BASE.

FIX THE BACK LEG HORIZONTAL FIXTURE **VERTICALLY**.



PLACE THE SEATING AND THE BACK REST REVERSED TO THE FLOOR. UNDO THE SCREWS WHICH YOU WILL FIND AFFIXED AND FIX THEM AGAIN BY PLACING THEM IN THE WOOD MAKING SURE THE METAL FIXTURES OF THE SEATING AND THE BACK REST ARE POSITIONED AS SEEN IN THE PICTURE. **TURN THE FIXTURE YOU WILL FIND FIXED TO THE BACK REST TOWARDS THE SEATING WITHOUT UNFIXING IT. TURN TOWARDS THE DIRECTION OF THE ARROW.**






NOTE : SEATING : 2 SCREW NUTS,
2 PARTICULAR SCREWS,
2 METAL FIXTURES


ALREADY TIED FIXTURES :
BACK REST : 1 PARTICULAR SCREW NUT,
1 PLASTIC NUT WASHER,
1 PARTICULAR SCREW,
1 METAL FIXTURE

FIX THE METAL ARM OF THE SWING WITH THE SCREWS AND NUTS PLACED ON THE SEATING. WHEN ASSEMBLING. FIX THE SCREWS AND NUTS IN THE SAME PLACES. THE 2 PLASTIC NUT WASHERS OF THE BACK REST SCREWS SHOULD BE PLACED ON TOP OF EACH OTHER.



WHEN JOINING THE SEATING AND THE BACK REST PARTS USE 2 KEYS AND MAKE SURE THEY ARE TIGHTENED WELL. TO MAKE CERTAIN. DETACH ONE HAND AND TURN THE KEY IF BOTH THE KEYS ARE TURNING TOGETHER THE PROCEDURE IS CORRECT.

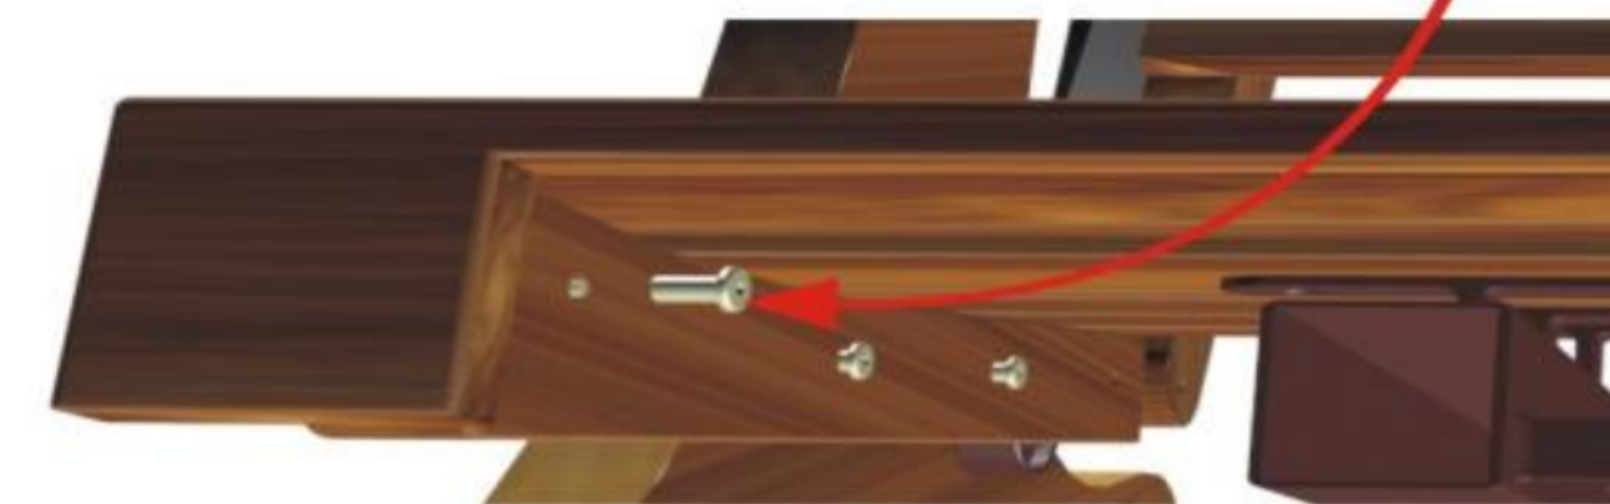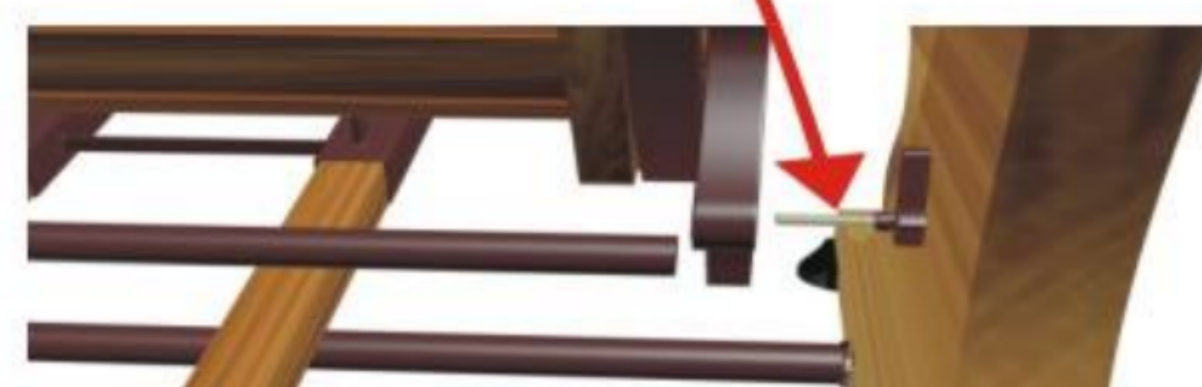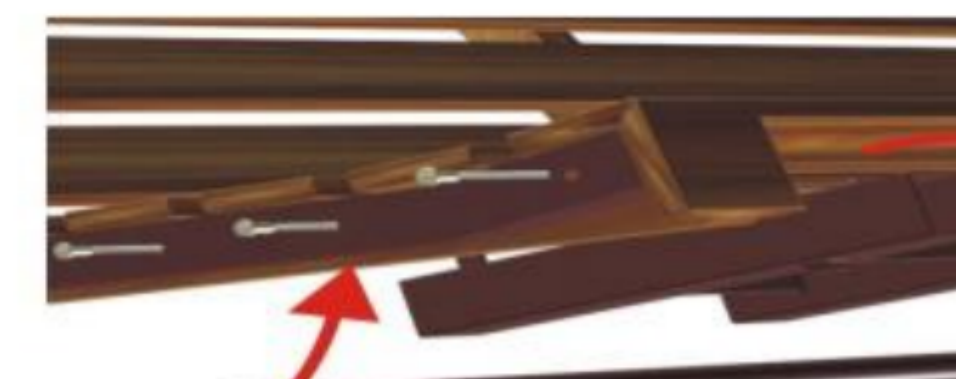

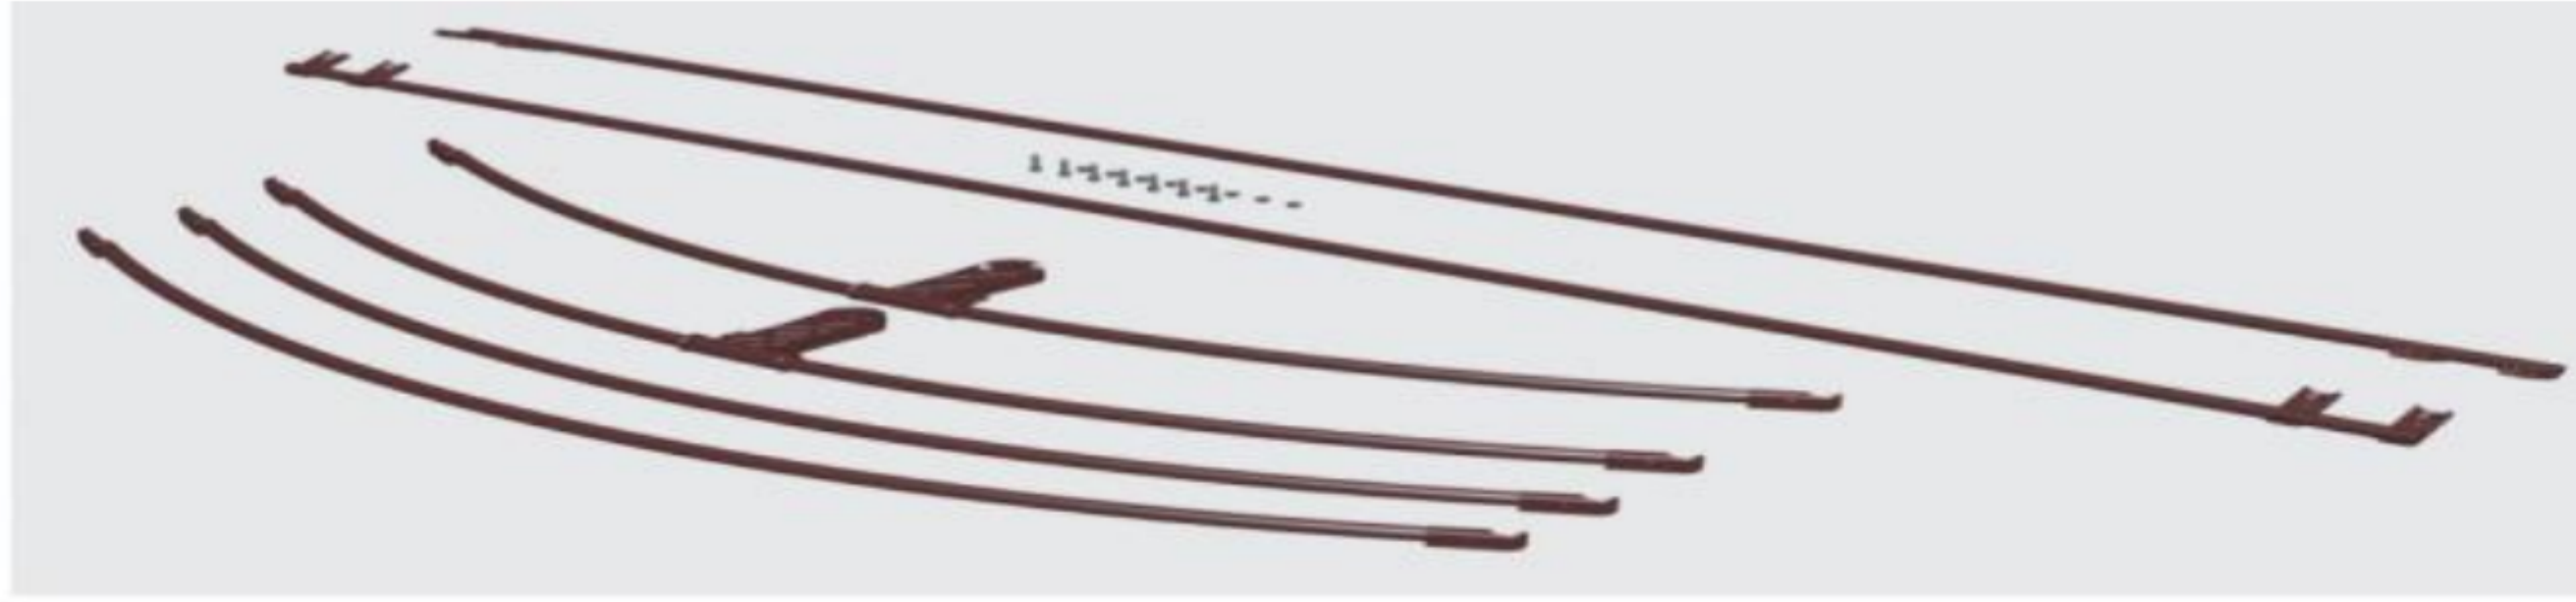

Yatay uçları kapalı uzun borunuzu tentenizin uzun olan kısmındaki aralıktan takarak bağlantı elemanı ile mekanizma olan bölüme sabitleyiniz.




Mekanizmanın dişli olan tarafından sıkma aparatının üzerine aralama yayını koyunuz.



Tentenizin yan bölümlerini diğer eğimli boruya geçirdikten sonra tenteden çıkan boru uçlarını resimde görüldüğü şekilde bağlantı aparatları ile birleştiriniz.

PLACE THE SLOPED TUBGE INSIDE THE SUNSHADE POSITIONING MECHANISM AND FIX THE TIGHTENING APPARATUS ON THE MECHANISM.

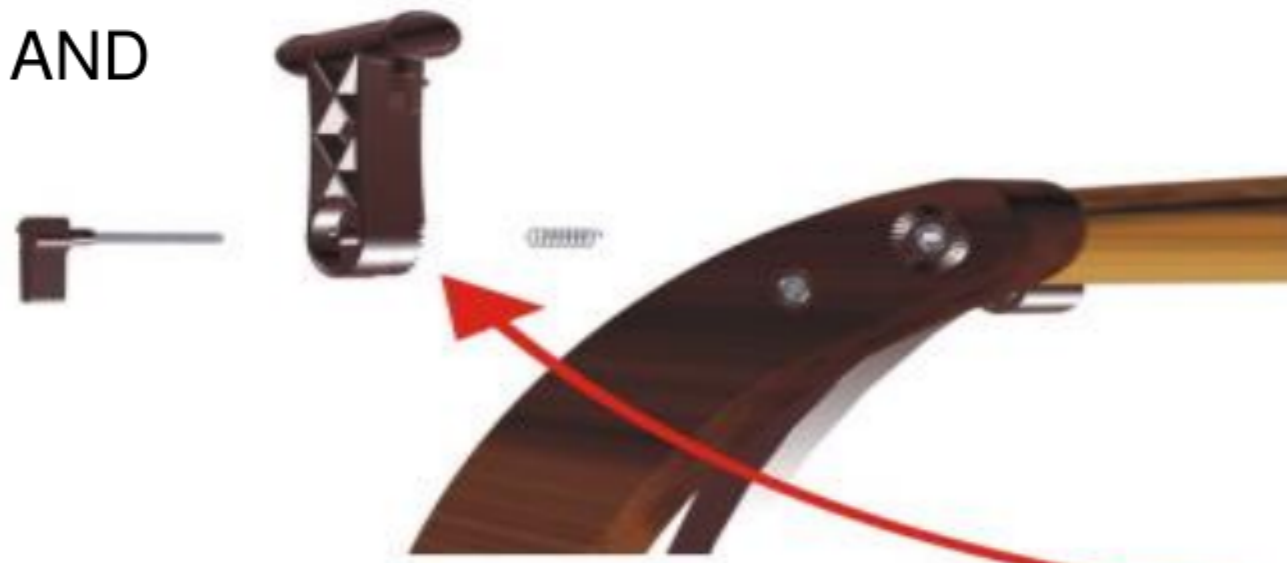

TIGHTEN THE SUNSHADE POSITIONING MECHANISM TO THE KNOTCHES OF THE SCREWS OF THE UPPER HORIZONTAL JOININGS OF THE SWING.

MAKE SURE THE FIXING KNOTCH IS PLACED CORRECTLY.



WITH ONE HAND PULL THE METAL ARM TOWARDS YOU.

WITH YOUR OTHER HAND PLACE THE FIXING BOLT TO THE HOLES AT THE SIDE LEGS OF THE SWING.



BAR TRAY (OPTIONAL)
PLACE THE TRAY ON THE SIDE LEG OF THE SWING MAKING SURE THE HOLES ON THE TRAY AND THE SIDE LEG OF THE SWING ARE ON TOP OF EACH OTHER AND TIGHTEN THE SCREWS.

Salıncağınızın arka tarafına geçerek sağ eliniz ile ayar mekanizması borusunu tutunuz. Diğer eliniz ile sırtlığınızın orta bölümünden tutunuz sağ eliniz ile tuttuğunuz kolu hafifçe kendinize çekerek sol eliniz ile sırtlığınızı yavaşça aşağıya indiriniz. Son kademeye geldiğinizde salıncağınız yatak konumuna gelecektir.

